



**Welcome** to the Campo “Field Assist Troubleshooting Guides”.

These guides were developed to assist the working technicians in the field. We’ve supplied issues and solutions to the most common problems encountered in the field. If you need assistance while troubleshooting on the job, they are easy to store in your smart phone, tablet or computer.

Getting Started is easy! Just click on ‘[Page #](#)’ for the problem you are encountering

Burner control is locked-out on reset  Burner control is NOT locked-out on reset

[Page 2](#)

➤ [Contact Us...Page 31](#)

[Page 16](#)

➤ [Rigerstration, Tech Tips and Bulletins](#) for you...[Page 32](#)

➤ [Quick set-up and technical information...Page 33](#)



Reset Button

- **NOTE:** If the red status light is flashing rapidly (three time per second) the control is locked out on reset. To reset, push and release the reset button.
- **Warning!** Continuous resetting of the burner control may cause an accumulation of gas in the heatexchanger, and this could lead to an Implosion of the heatexchanger or personal harm.

- You Reset the Burner Control, and It Goes Through The purge, But Does Not ignite... [Page 3](#)
- The Burner motor Did Not Start and the Burner Control Locks-out on Reset... [Page 11](#)
- The reset light is solid red during the pre-purge... [Page 14](#)
- The burner fires up, but the flame goes out after 5 to 10 seconds... [Page15](#)

# You reset the control and it goes through the purge, but doesn't ignite...

“Field Assist Troubleshooting Guide”




- Install your manometer in the outlet port of the manual valve between the gas valve and LP/NG switchover valve.
- Reset the burner control.
- After the 60 second purge, check to see if gas pressure is coming through the valve.
- Keep a close eye on the manometer, as the pressure will only register for 1 second after the 60 second pre-purge.

If gas pressure **is** present... [Page 4](#)

If gas pressure is **NOT** present... [Page 6](#)

Outlet port

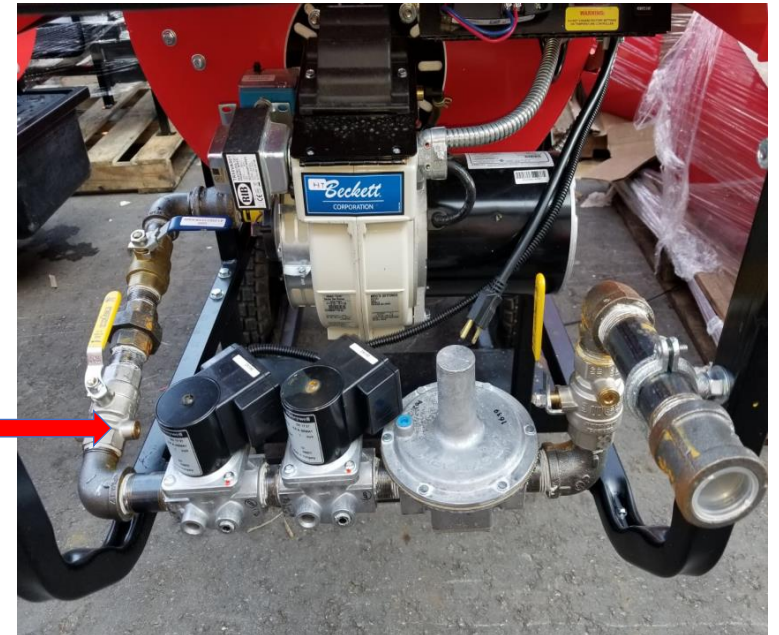

# If gas pressure is present...



✓ Defective igniter



✓ Defective ignition cable



✓ Broken electrode



➤ Test the components... [Page 5](#)



Ignition Cable

Electrode (Gap 1/8")

✓ No spark indicates a defective igniter

### SHUT OFF the gas supply to the burner before testing!

1. Inspect the ignition electrode porcelain for cracks.
2. Inspect the ignition cable for cracks.
3. Inspect the electrode gap, ensuring the gap is 1/8".
  - With the gun still outside the burner casing, re-connect the ignition cable to the igniter.
  - Ensure the gas gun is WELL GROUNDED to the burner housing when testing for spark.
  - Reset the burner control and check for spark after the pre-purge.
  - Keep a close eye on the electrode as the spark will only appear for 1 or 2 seconds AFTER the 60 second pre-purge.

Problem Solved

# If gas pressure is NOT present...



- ✓ Defective 24v Transformer
- ✓ Defective Burner Control
- ✓ Defective gas valve



➤ Test the components... [Page 7](#)

## Checking the manual reset on the high gas pressure switch...


## “Field Assist Troubleshooting Guide”




Ensure the high-pressure gas switch is NOT locked out on reset. (push reset button located on the top of the switch)

Ensure the 'switchover valve' is in the proper position for LP OR NG

➤ Continue to... [Page 8](#)

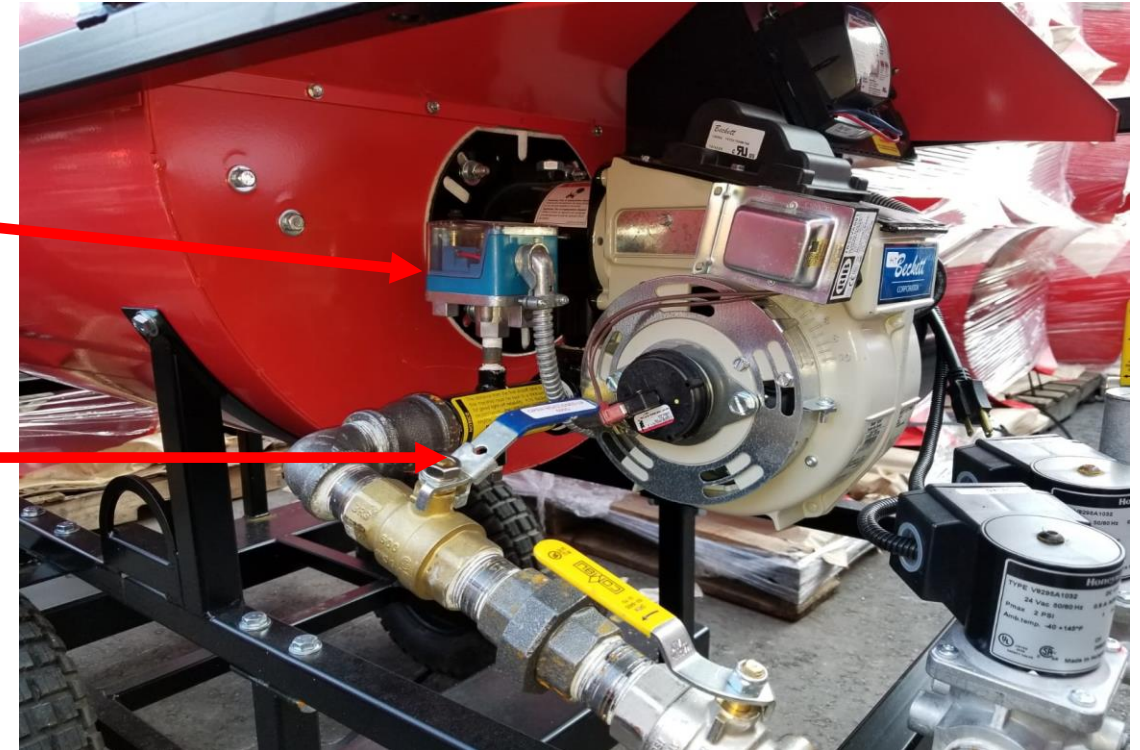


# Checking the 24- volt transformer...

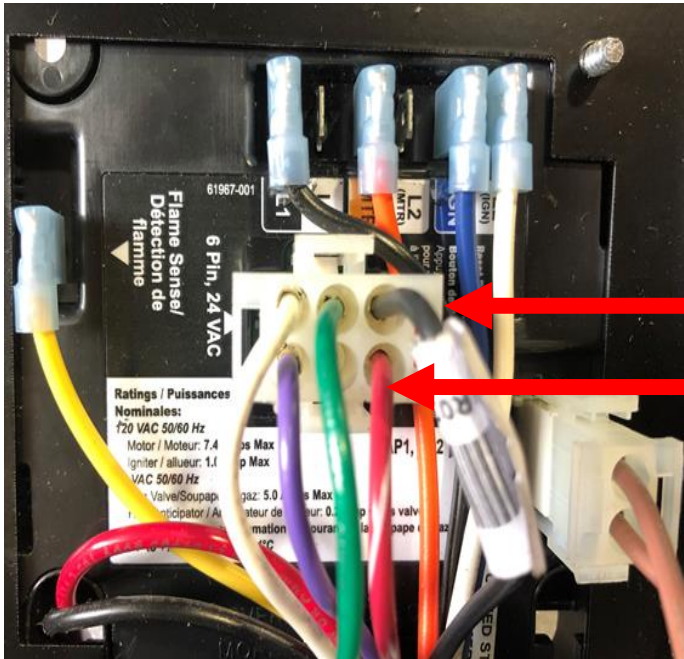

- Check for **24 volts** between the **black** and '**red stripe**' wires on the 6 prong plug of the burner control
- **Note:** sometimes it is **2 red** wires on plug.
- ✓ If **24 volts** is **NOT** present, the transformer is defective.
- If **24 volts** **is** present, continue to... [Page 9](#)

# Checking the burner control and gas valve...

## “Field Assist Troubleshooting Guide”

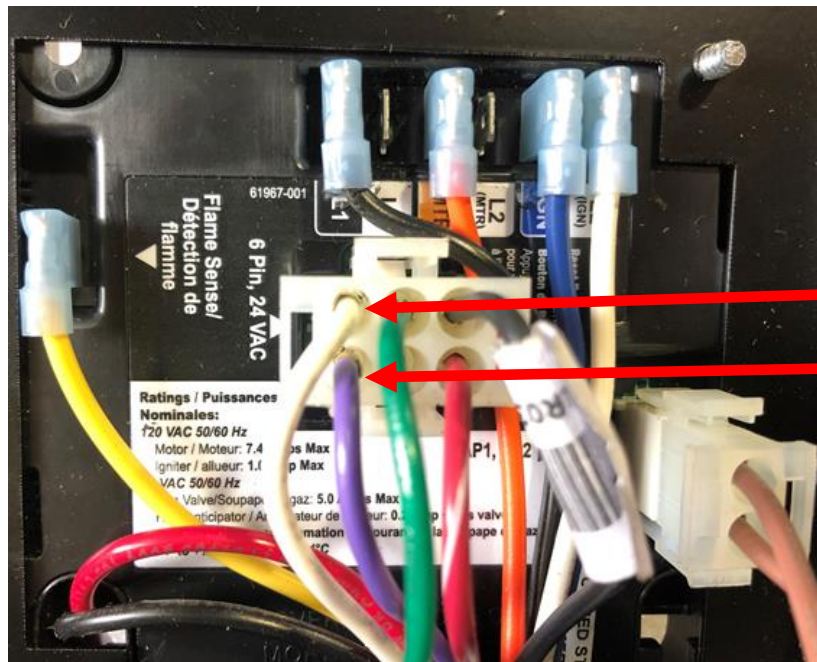

- Reset the Burner Control. After the 60 second purge, check for **24 volts** on the 6 –prong plug between the white and violet wires.
- ✓ If **24 volts** is **NOT** present after the purge, the burner control is defective.
- ✓ If **24 volts** **is** present after the 60 second purge, one of the is defective.
- Check the solenoid gas valves...[Page 10](#)



gas valve #2 test port

Install manometer in gas valve #2 test port. Reset the Burner Control. After the 60 second purge... Keep a close eye on the manometer, as the pressure will only register for 1 or seconds after the 60 second purge.

- ✓ If NO pressure is detected, the #1 valve is defective.
- ✓ If pressure IS detected, #2 valve is defective.

**Problem solved**



Light Flashing reset control

✓ Defective burner motor.



✓ Defective Burner Control




✓ Defective Motor Relay



➤ Test the components...[Page 12](#)

# Checking burner motor, motor relay and burner control...

“Field Assist Troubleshooting Guide”

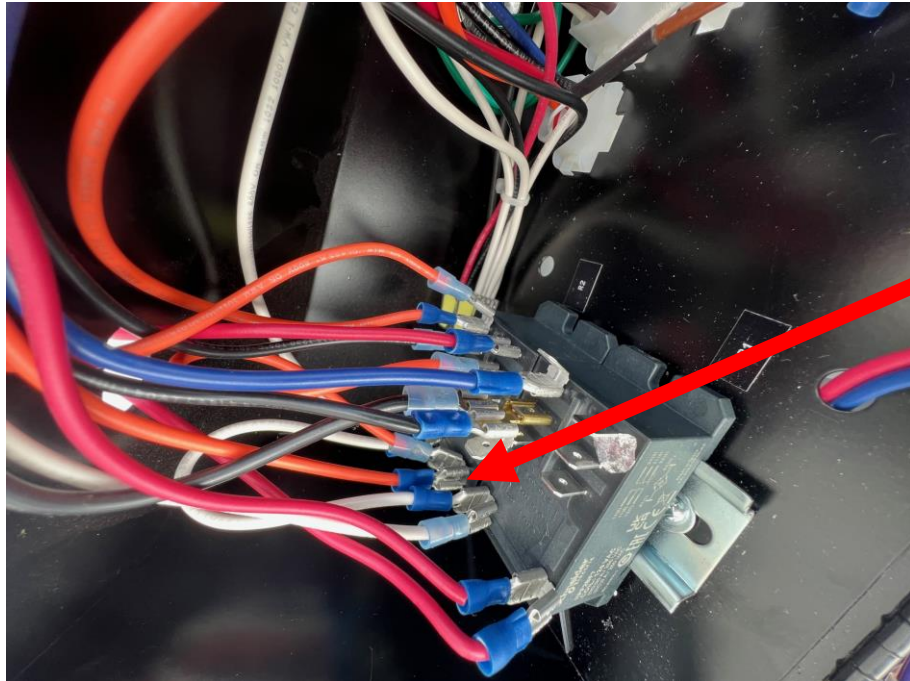

Reset burner control, then check for 120 volts on burner motor relay R2 coil.

- ✓ If 120 volts is NOT present, defective burner control.
- ✓ If 120 volts is present, defective burner motor relay OR burner motor.



➤ Checking burner motor and motor relay...[Page 13](#)



- Reset the burner control and check for **120 volts** on burner motor relay (R2) on the motor terminal. (orange wire)
- ✓ If **120 volts** is present, defective burner motor
- ✓ If **120 volts** is **NOT** present, defective burner motor relay


**Problem solved**

# The reset light is solid red during the purge, and the control locks out on reset

“Field Assist Troubleshooting Guide”



- ✓ The air proving switch is defective
- ✓ The air hose is cracked or busted
- **Note:** The air proven switch contact must be open to start and close after the burner motor starts.

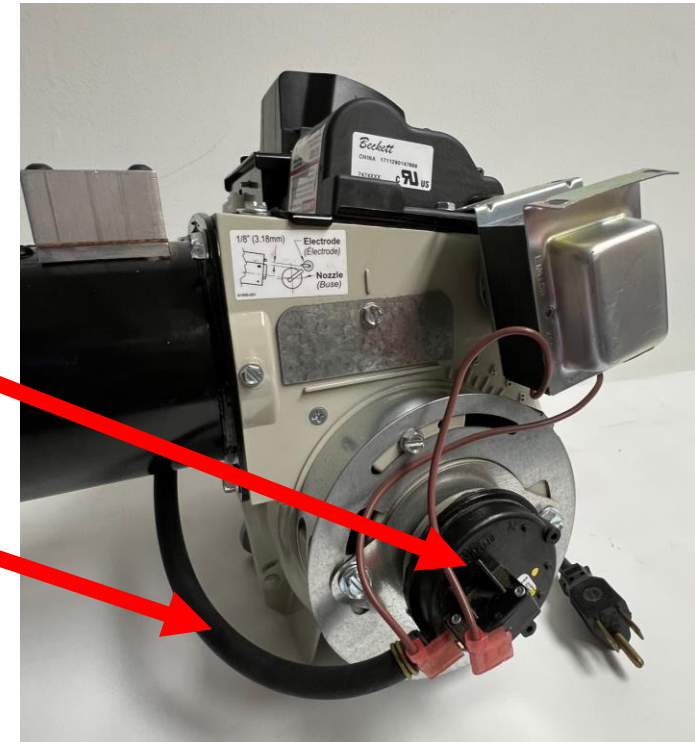


**Problem solved**

# The burner fires up, but the flame goes out after 5 or 10 seconds.

“Field Assist Troubleshooting Guide”



- Clean or replace flame rod or wire.
- ✓ Flame rod lead wire is defective
- ✓ The flame rod is defective or dirty
- **NOTE:** do not use sandpaper to clean flame rod. A cloth will be sufficient.

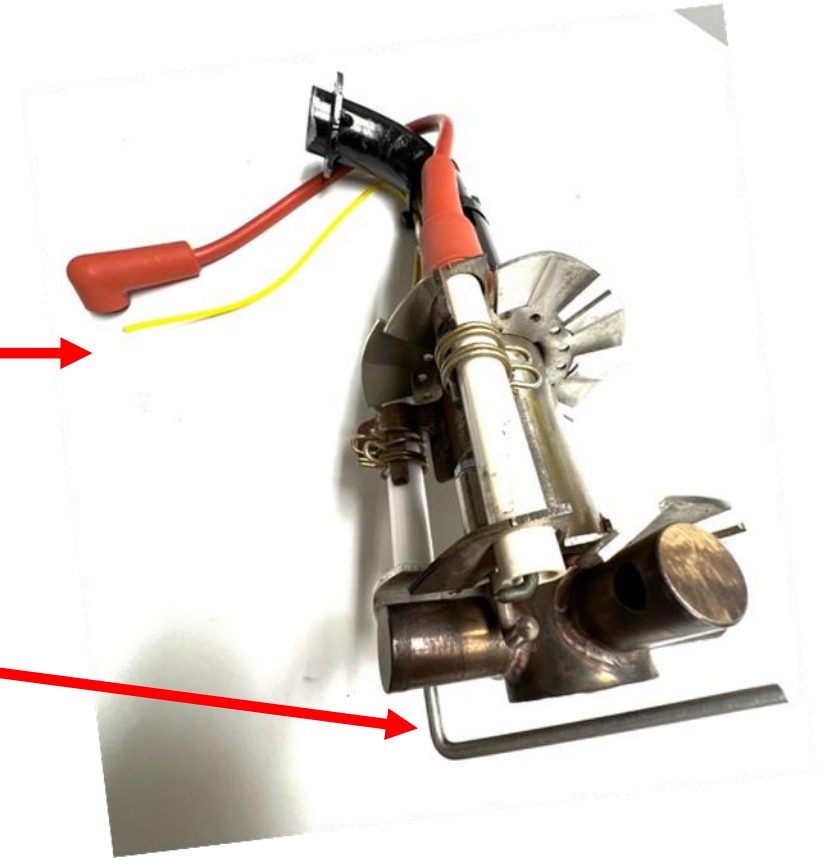

**Problem solved**

# The Burner is NOT locked out on reset...

“Field Assist Troubleshooting Guide”




Choose the issue you are encountering and click on the Page #

- If the Burner Control is NOT locked out on Reset and will not start... [Page 17](#)
- If the Circulating Fan Fails To start... [Page 24](#)
- If the fan is starting intermittently, erratically or inconsistently...[Page 25](#)
- Circulating Fan Does Not Shut Off... [Page26](#)


# If the Burner Control is NOT locked out on Reset...

## “Field Assist Troubleshooting Guide”

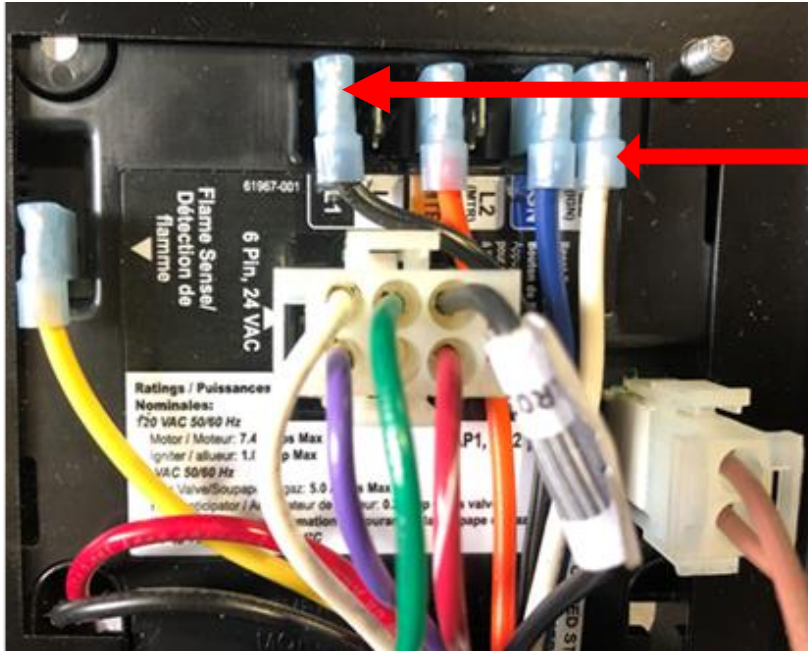

- Check for **120 volts** between Terminal (L1) and Common (L2) on the burner control.
- If **120 volts** is present... [Page 18](#)
- If **120 volts** is **NOT** present... [Page 20](#)

If 120 volts is PRESENT on burner control...

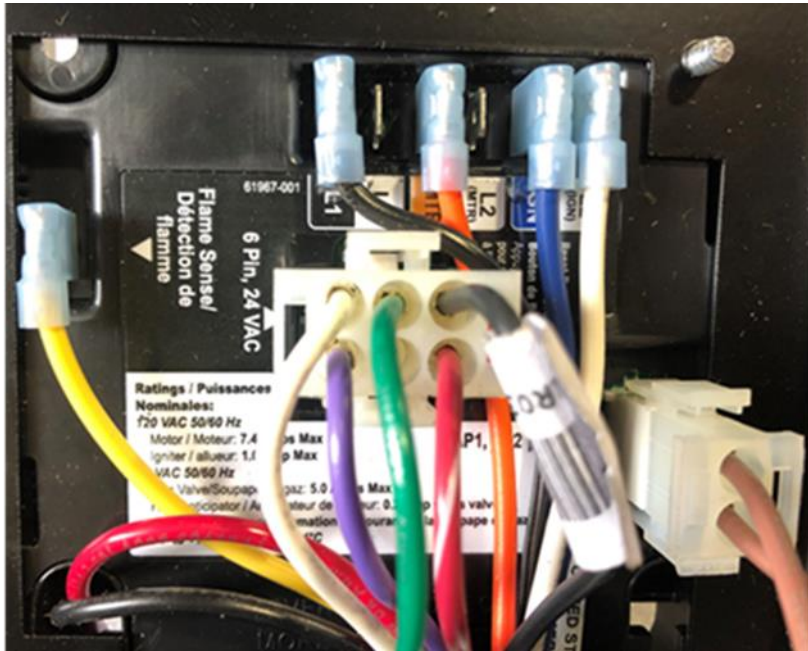

✓ Defective Bypass Switch



✓ Defective Burner Control



➤ Test the components... [Page 19](#)



Terminals TR-TW

To check the bypass switch, place a jumper wire on terminals TR-TW

- ✓ If the burner starts, the bypass switch is defective.
- ✓ If the burner does not start, the burner control is defective.

**Problem solved**

# If 120 volts is NOT present on burner control between L1 and (L2)...

"Field Assist Troubleshooting Guide"




- ✓ Defective Thermal Limit Disc **150°F**
- ✓ Defective Thermocouple
- ✓ Defective Temperature Controller
- ✓ Defective Fan Motor Thermostat Switch

Thermocouple



Thermal Limit Disc

Temperature Controller

Thermostat Switch Sealed Inside Fan Motor  
**Not** field serviceable

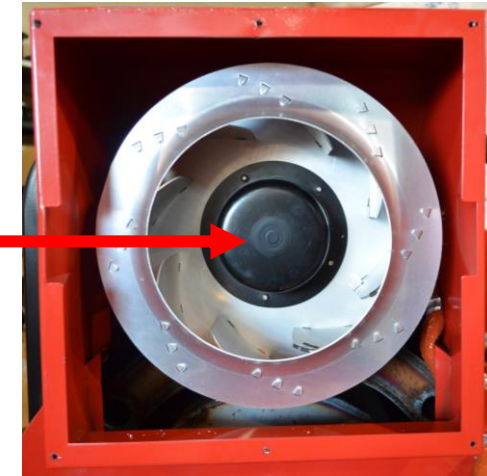

➤ Test the temperature controller... [Page 21](#)

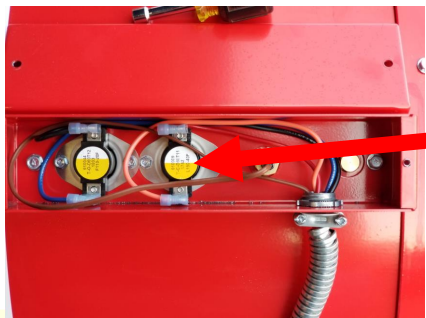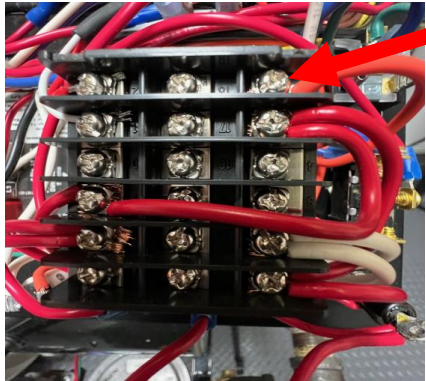

- **NOTE:** If the display on the temperature controller is reading 000 (or other false reading), it is defective.
- Check for **120 volts** on the orange wire terminal #6 on the temperature controller.
  - ✓ If **120 volts** is **NOT** present, the temperature controller is defective.
  - If **120 volts** is present, check for **120 volts** on each terminal of the disc to ground.
  - ✓ If **120 volts** is **not** present on both terminals of the disc150F thermal limit disc, the disc is defective.
  - ✓ If **120 volts** is present on both terminals,
- Continue... [Page 22](#)

# Test the high limit 150°F disc and motor thermostat



- **Note:** newer models have a manual reset limit disc, check to ensure it is not tripped off.
- If **120 volts is** present on both terminals of the disc, check for **120 volts** on the Hi pressure switch. Ensure it is **not** tripped off by pressing the reset button in.
- If **120 volts is not** present, motor thermostat is defective.
- **Note:** the fan motor thermostat is located inside the motor and is **not** field serviceable.
- Test the motor thermostat... [Page 23](#)

**Problem solved**




- **NOTE:** On late model, Blaze construction heaters, the circulating fan motors are equipped with a thermal heat thermostat that is **not field serviceable**.
- The motor thermostat is wired in series with the **120-volt** temperature controller circuit.

Check to ensure the thermal heat thermostat contact is closed by testing for continuity, using the 2 white or 2 grey wires leading to the circulating fan motor.

- If the contact is closed, the thermal heat switch is good.
- ✓ If the contact is open, the 'Circulating Fan Motor' is defective and needs to be replaced.

**Problem solved**

# If the circulating fan fails to start...

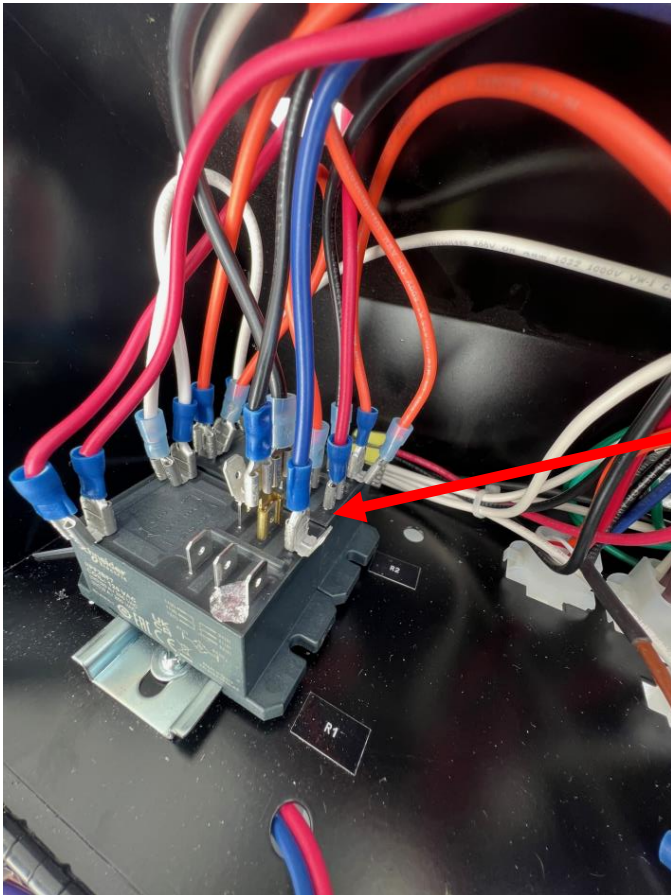

With the Fan Override switch in the ON position, check for **120 volts** on the fan relay (R1) on the fan motor terminal. (Blue wire)

- ✓ If there is **120 volts** is present, the Motor is defective.
- ✓ If **120 volts** is **NOT** present, the relay is defective



**Problem solved**

# If the fan is starting intermittently, erratically or inconsistently...



The **EB400D** is equipped with redundant controls to ensure positive starts for the circulating blower fan.

- ✓ If the temperature controller display reaches **90°F** and the fan does not start, the controller is defective.
- ✓ If the fan does not start within **90** seconds of the burner starting, the fan timer is defective.
- ✓ If the temperature at the fan **110°F Disc** is over **110°F** and the fan does not start, the **110°F fan disc** is defective.



## Problem solved

- **Note:** It is very unlikely that all 3 components would be defective at the same time. If the circulating fan fails to start, likely it would be the circulating fan motor or the (R1) relay

# Circulating fan does not shut off...



Fan Override Switch

➤ First, ensure that the ambient temperature at the 110°F fan disc is less than 80°F.

✓ The Fan Override switch is in the ON position. (Turn it to the OFF position)

✓ Defective 110°F fan disc



✓ Defective fan relay




✓ Defective temperature controller



➤ Testing the components... [Page 27](#)

# Circulating fan does not shut off

## Checking – 110°F fan disc...

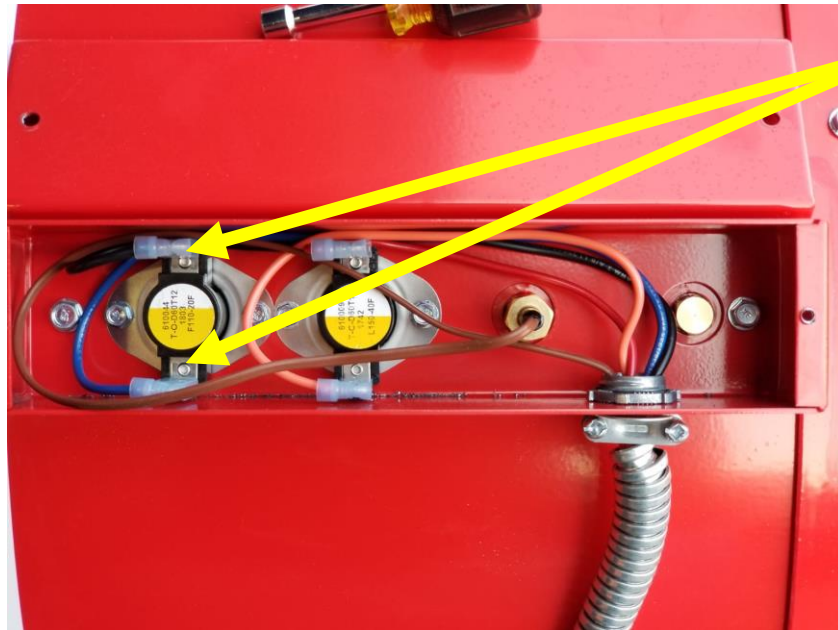


Check for **120 volts** between ground and each terminal.

**Note:** If **120 volts** is present on BOTH terminals, the disc is defective.

If **120 volts** is present on ONE terminal only, the disc is GOOD Continue...[Page 28](#)

# Circulating fan does not shut off

## Checking - circulating fan relay...

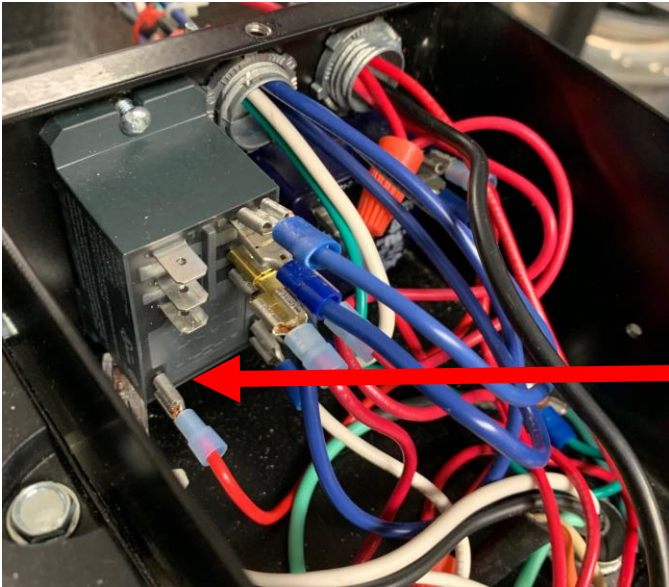

- Check for **120 volts** on the relay coil terminals.



- ✓ If **120 volts** is **not** present, defective relay
- ✓ If **120 volts** **is** present on the relay coil... [Page 29](#)

# Circulating fan does not shut off...




If the circulating fan 110°F disc is good AND there is **120 volts** on the circulating fan relay (R1) coil.

- ✓ Defective temperature controller
- ✓ Defective Thermocouple
- Testing the components... [Page 30](#)



### Testing the thermocouple...

- Remove the (small) red and white thermocouple wires from the back of the temperature controller
- Install a jumper wire between the two terminals

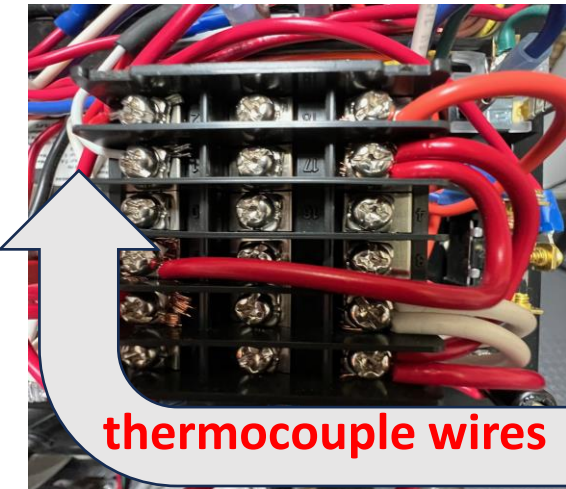

- ✓ If the fan **stops** running, the thermocouple is defective
- ✓ If the fan **continues** to run, the temperature controller is defective
- **Caution...** do not remove the wrong red and white wires

**Problem solved**

**We pride ourselves in offering...  
The best technical support in the industry**

"Field Assist Troubleshooting Guide"



**[sales@campequipment.com](mailto:sales@campequipment.com)**




**1-866-323-0042**



**Don't get left behind. Stay on the top of your game and become a...  
" Campo Field Assist Program Member".**

- As a member you will receive updates and notifications of any changes to the Guides.
- As a member you will be notified of upcoming courses.
- As a member you will be first to receive any new "Field Assist Troubleshooting Guides"
- As a member you will receive more "Tips" to make your job easier.

**"It's quick, simple and easy, join us today"**

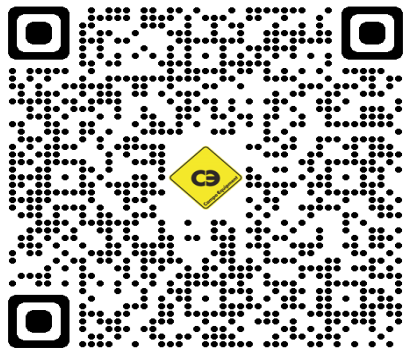

OR

[www.campoequipment.com/techsupp](http://www.campoequipment.com/techsupp)

## Choose the information you require and click on the Page #

- Adjusting the burner combustion...[Page 42](#)
- Air settings and Gas pressure...[Page 41](#)
- Gas train test port locations...[Page 43](#)
- Pre-season annual maintenance...[Page 45](#)
- Duct sizing and limitations...[Page 64](#)
- Gas Piping and regulator sizing examples...[Page 47](#)
- Start-up procedure...[Page 34](#)
- Venting the heater...[Page 39](#)
- Electrical hook up...[Page 44](#)
- Gas piping charts...[Page 59](#)



- All heaters should be set up by a qualified gas technician.
  - Make sure all piping and fittings are tight and free from gas leaks.
  - Purge all air from gas lines connected to the regulator.
  - Soap test all gas lines and fittings including gas train for leaks.
- **Caution:** If the heater is going to be fed with power from a generator, always have the heater unplugged until the generator is running stable. Ensure the generator is sized to accommodate the heater voltage demand.
- Start-up continued...[Page 35](#)



## What you need to commission the heater!



Combustion Analyzer



Voltmeter



Manometer


➤ Continue to set-up...[Page 36](#)

## Start-up procedure gas continued...

## “Field Assist Troubleshooting Guide”



Have a qualified gas fitter determine the correct regulators to use and the correct diameter hose to feed the unit with fuel according to pressure in the supply line and length of lines. Gas fitters have charts to help them determine this information.

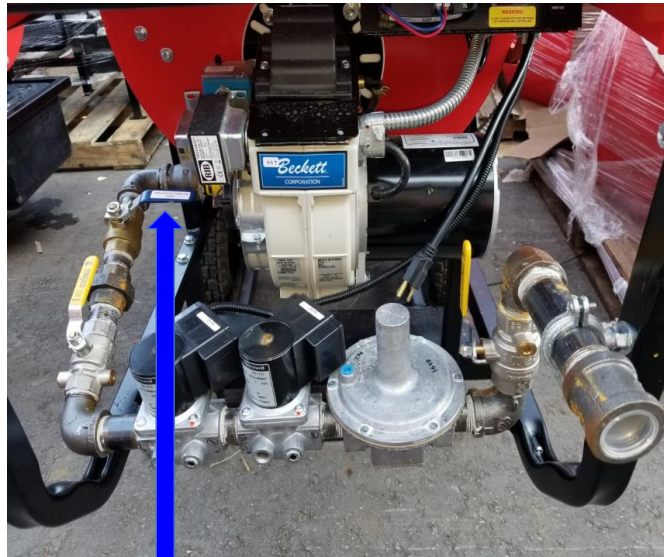

Switch over valve

- Determine if unit will run on Natural gas or Propane.
- Make sure that NG/LP switchover valve is in the right position.
- Make sure the incoming gas pressure is between 7” and 14” WC.
- Make sure the venting is properly installed.
- Make sure the proper voltage is supplied to the heater.
- Make sure the proper size wiring is connected to the heater.

➤ Start-up continued...[Page 37](#)



With the switch for the burner in the off position, plug in the heater, turn the fan manual override switch to ON position and ensure voltage remains steady. Return fan manual override switch to OFF position.

- Place the toggle switch in bypass position to start the burner.  
Once the burner is running make sure that incoming pressure is between **7” and 14”** of WC .
- ✓ If the pressure drops out when running, it means that there is not enough volume of gas or not enough pressure.
  - **If the gas pressure drops**, make sure the gas regulators and piping are correct.
- Adjusting the burner for proper combustion....[Page 38](#)

# Adjusting the burner for clean and reliable combustion




## Clean & Reliable Combustion

Getting the most reliable performance out of an oil burner comes down to ensuring that it is properly set up. This can require some fine tuning, but the following steps should help you achieve the reliable combustion you are looking for...Page

➤ **No installation** is complete until the combustion of the heater has been performed.

Using a combustion analyzer... [Page 42](#)



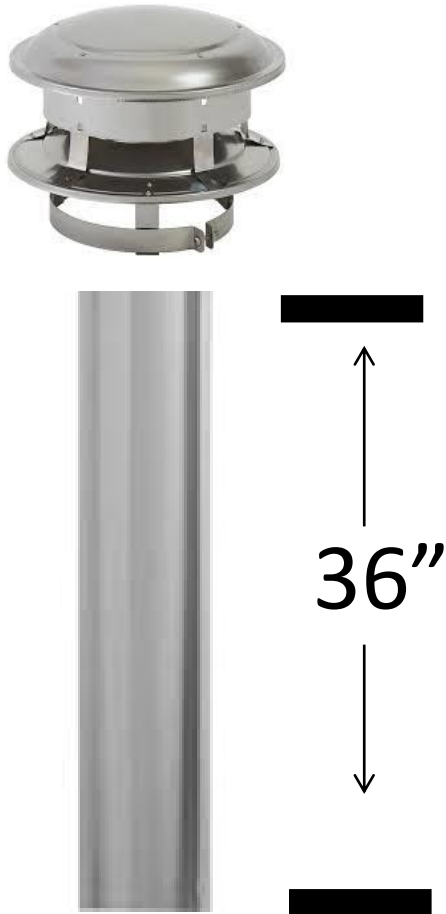

- Make sure to install a stack minimum 36” on the flue.
- Make sure to install a rain cap on the flue pipe.
- Make sure that flue gases are not being circulated into by the cooling fan and pushed into the space you are heating.

**WARNING:** The appropriate measures must be taken to ensure there will be no positive pressures on the exhaust flue of the heater.

➤ Venting from inside a building... [Page 40](#)

## Best practices for venting when heater is located inside a building

- Avoid using as many 90-degree elbows as possible
- Venting runs should be as short as possible
- Vertical rise minimum 3 feet, 5 feet is better outside the building.
- Always install a rain cap.



- Never decrease diameter of flue piping.
- Horizontal runs  $\frac{1}{4}$ " per foot rise.
- Make sure all piping is properly secured.
- Make sure there is no negative pressure inside the building where the heater is placed.

➤ **Note:** where the vent pipe passes through a combustible wall a fireproof thimble must be used.

➤ Back to other technical information... [Page 33](#)





Proper air adjustments must be preformed for reliable combustion



Band

Shutter

- Recommended air settings are indicated in manufactures instructions as:  
Example: 10/3 the first number being the shutter and the **second number being the band**.
- **Note:** recommend air settings are approximate and will change with altitude and fuel oil temperature.
- **The Use of a combustion analyzer** will ensure clean burning and maximum efficiency.
- **EB400G** Air setting 10/3, Gas pressure LP 2.9” WC NG 2.9” WC, Head setting to # 10.3

➤ Back to other technical information...[Page 33](#)



- While the flue-stack is still cold pre-drill ¼" hole in the flue-stack 18" above the flue collar.


Set the air settings to manufacturer's recommendations. Once you've done that, start the burner and let it operate for **10** minutes. Next, draw an Oxygen (O<sub>2</sub>) sample from the flue pipe. Adjust the air settings to achieve between **3% & 4% (O<sub>2</sub>)**. Check the CO (Carbon Monoxide) level it should not be higher than **50 PPM**.



**Air Adjustments**




**Combustion Analyzer**

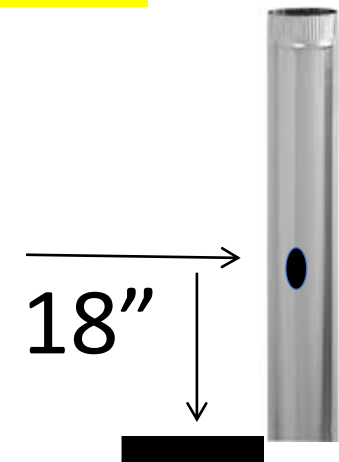

**Test Hole**

- Back to other technical information... [Page 33](#)

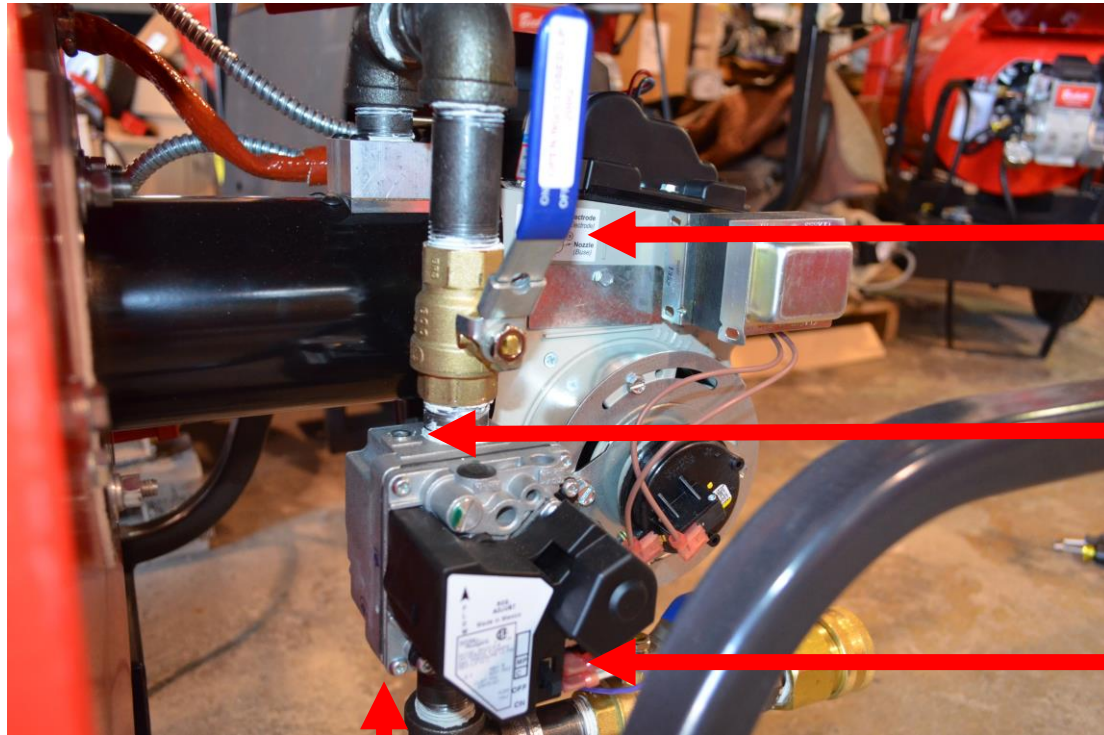

Switchover valve for LP OR NG

Test outlet port

Gas valve On/Off Switch

Test Inlet port

➤ Back to other technical information... [Page 33](#)



- **Only** extension cords that are CSA / UL approved should be used. Extension cords should be no less than **# 12** gauge up to **50** feet. Over and up to **100** feet, no less than **#10** gauge should be used. Do not plug multiple extensions together. Make sure extension cords are placed so as not to obstruct walkways and protected against traffic.



- **WARNING:** If the heater is going to be fed with power from a generator, always have the heater unplugged until the generator is running stable. Ensure the generator is sized to accommodate the heater voltage demand.

- Back to other technical information... [Page 33](#)





## Natural Gas and Propane Burner

### Preform and Record combustion results:

### Check

O2 PERCENTAGE (oxygen)

✓ done

CO parts per million (ppm carbon monoxide)

✓ done

Remove gas gun assembly adjust electrodes check for cracks and clean

✓ done

Lubricate o ring on gun assembly

✓ done

Clean flame rod

✓ done

Check ignition cable

✓ done

Start burner and check control safety lock-out

✓ done

Check and adjust gas pressure Hi fire and Low fire

✓ done

Clean blower wheel (remove dust)

✓ done

Check air switch hose for cracks

✓ done

Check gas train fittings for leaks

✓ done

Start heater and check operation of thermostat /bypass

✓ done

[HOME](#)

Continue [Page 46](#)



Heater controls	Check
<b>Test temperature controller.</b> Fan on at 90F / Fan off at 80°F Burner off 5° F above set high limit / Burner back on at high set temp	✓ Done
<b>Check circulating fan,</b> (Fan timer, Fan relay, 110°F disk)	✓ Done
Check wiring terminals inside control panel, tighten if lose	✓ Done
Clean heater casing and check for dents	✓ Done

➤ **Note:** Pre-season annual maintenance will save you time, money and service calls every time you rent the unit.

Back to previous menu... [Page 33](#)

# Gas piping, and regulator sizing...



➤ **Note:** All gas piping should be calculated and installed by a qualified Gas fitter. Gas fitters have charts for sizing gas pipes and proper regulators for different pressures and installations.

It is important to use the right sizing piping charts for your area. Code regulations vary from different States and Provinces.



➤ Pipe and regulator sizing example... [Page 48](#)




[HOME](#)

# Natural Gas and Propane Regulator Examples...



1. Obtain the specifications included with the operational instructions for gas heaters.
2. Size the gas regulator according to the gas **inlet** pressure available to the heater.
3. Read the **outlet** pressure required for the heater on the heater specification sheet.
4. Size the regulator according to both the **inlet** and **outlet** gas pipe diameter of the gas train.

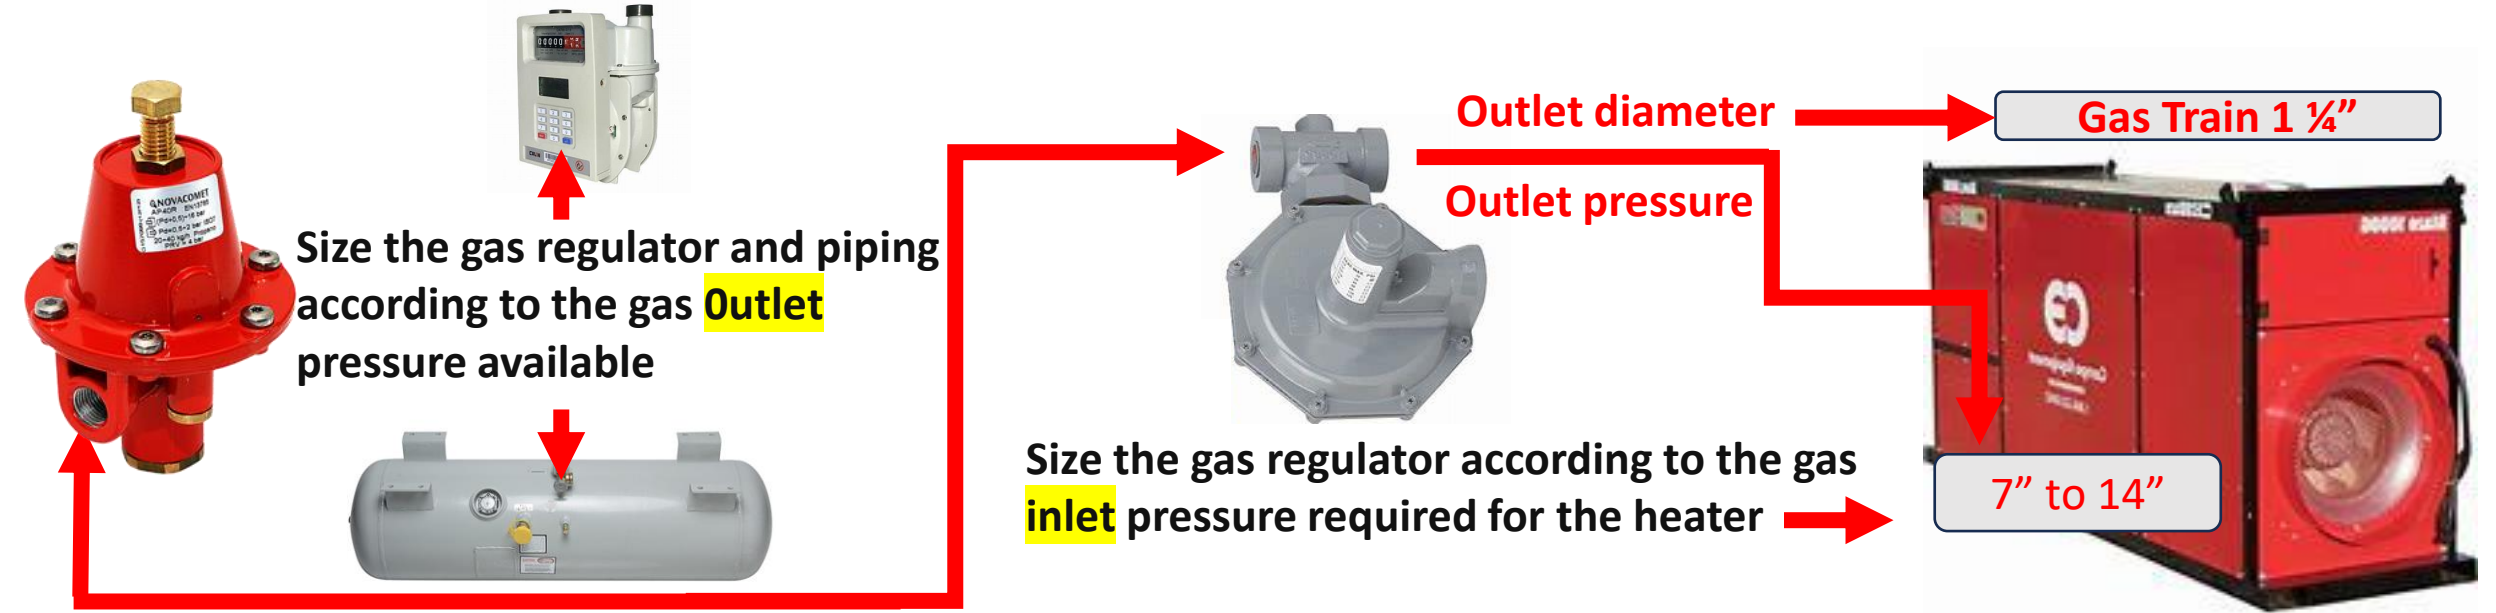

➤ **Note:** The supplied **pressure regulator** with the heater on the gas train is used only to adjust the burner operating pressure. The only time a secondary regulator is not used is when the gas supplied on site from the meter is less than **14"** WC.

Pipe sizing example... [Page 49](#)

# Pipe sizing the job site...

## "Field Assist Troubleshooting Guide"



### ➤ WHAT YOU NEED TO KNOW

Where the heater will be placed

What Pressure is available **2 Psig**

Gas type **Natural Gas**

Total BTUs of all units connected to gas piping **3 million**

Length of longest run. **125 feet**

➤ Steve's Job site requiring 1 heater - **1 million BTUs** and 1 - heater **2 million BTUs**.




**2 million BTU**

?

**20 feet**



**1 million BTU**

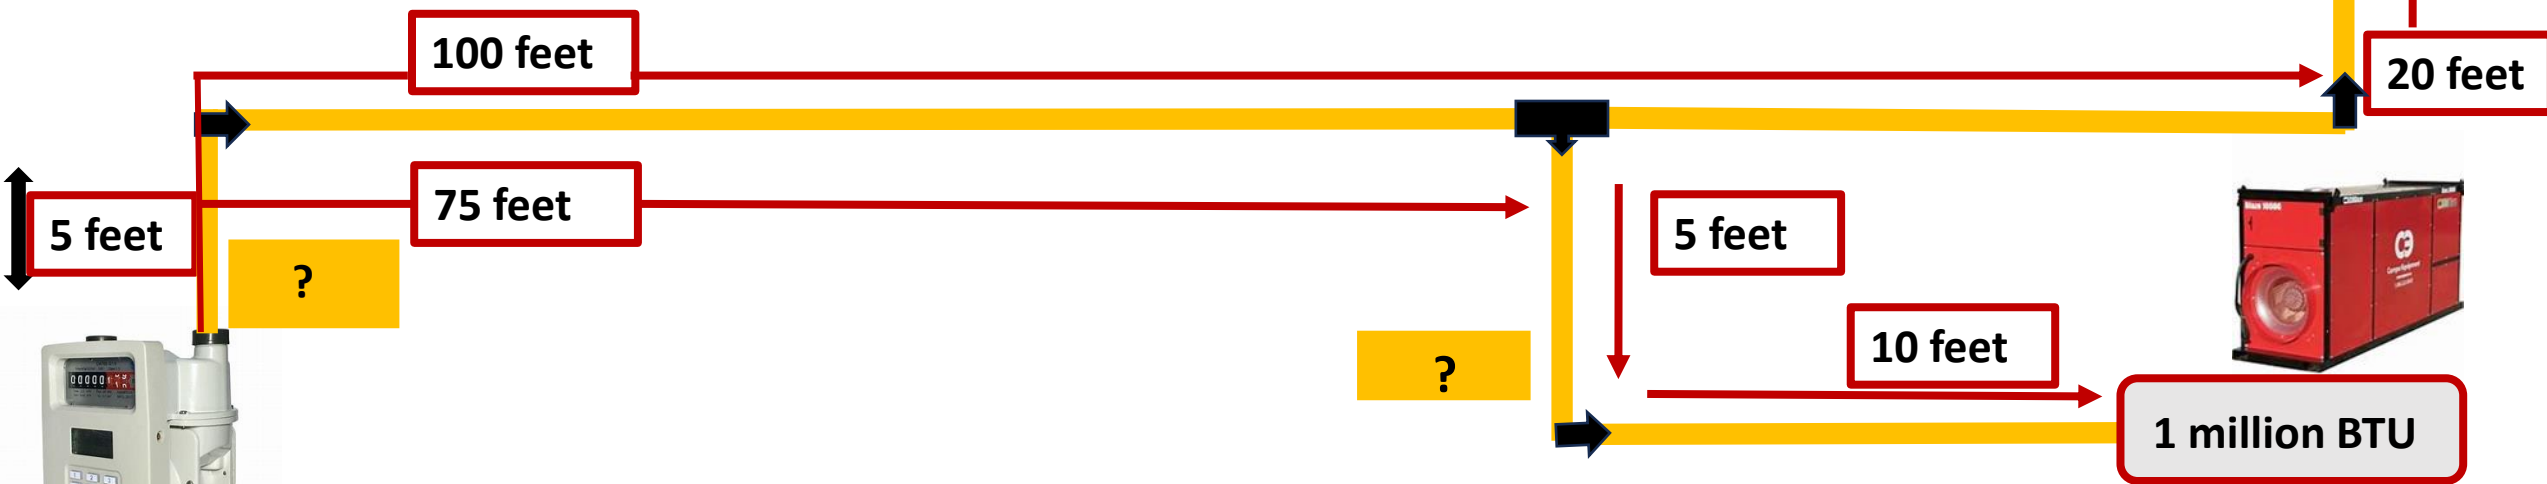

Next... [Page 50](#)

# Pipe sizing...

# "Field Assist Troubleshooting Guide"



Find size of pipe to the first branch using your 2 Psig chart for NG. and 125-foot run.

		GAS: NATURAL													
		INLET PRESSURE: LESS THAN 2 psig													
		PRESSURE DROP: 0.5 in. w.c.													
		SPECIFIC GRAVITY: 0.60													
		PIPE SIZE (inch)													
NOMINAL	1/2	3/4	1	1 1/4	1 1/2	2	2 1/2	3	4	5	6	8	10	12	
ACTUAL I.D.	0.822	0.824	1.049	1.380	1.610	2.067	2.469	3.068	4.026	5.047	6.065	7.981	10.020	11.938	
CAPACITY IN CUBIC FEET OF GAS PER HOUR															
LENGTH (feet)	10	172	360	678	1390	2090	4029	6400	11300	23100	41800	67600	139000	252000	399000
20	118	247	466	957	1430	2760	4400	7780	15900	28700	46500	95500	173000	275000	430000
30	95	199	374	768	1150	2220	3530	6250	12700	23000	37300	76700	139000	220000	340000
40	81	170	320	657	985	1900	3020	5350	10900	19700	31900	65600	119000	189000	290000
50	72	151	284	583	873	1680	2680	4740	9660	17500	28300	58200	106000	167000	250000
60	65	137	257	528	791	1520	2430	4390	8760	15800	25600	52700	97700	152000	220000
70	60	126	237	486	728	1400	2230	3950	8050	14600	23600	48500	88100	139000	200000
80	56	117	220	452	677	1300	2080	3670	7490	13600	22000	45100	81900	130000	190000
90	52	110	207	424	635	1220	1950	3450	7030	12700	20600	42300	76900	122000	176000
100	50	104	195	400	600	1160	1840	3260	6640	12000	19500	40000	72600	115000	160000
125	44	92	173	355	532	1020	1630	2890	5890	10600	17200	35400	64300	102000	140000
150	40	83	157	322	482	928	1480	2610	5330	9650	15600	32100	58300	92300	126000
175	37	77	144	296	443	854	1360	2410	4910	8880	14400	29500	53600	84900	114000
200	34	71	134	275	412	794	1270	2240	4560	8260	13400	27500	49900	79000	106000
250	30	63	119	244	366	704	1120	1990	4050	7320	11900	24300	44200	70000	93000
300	27	57	108	221	331	638	1020	1800	3670	6630	10700	22100	40100	63400	83000



2 million BTU

?

20 feet



1 million BTU

5 feet

?

10 feet

100 feet

75 feet

5 feet

?

Next Consult Chart



2Psig.

**Pipe sizing Table for 2 pounds Pressure with a 10% Pressure drop and a gas of...  
0.6 Specific Gravity**

**Continue...[Page 52](#)**

Pipe Size of Schedule 40 Standard Pipe (Inches)	Internal Diameter (Inches)	Total Equivalent Length of Pipe in Feet										
		50	100	150	200	250	300	400	500	1000	1500	2000
1.00	1.049	1112	764	614								
1.25	1.380	2283	1569	1260								
1.50	1.610	3421	2351	1888								
<b>2.00</b>	2.067	6589	4528	<b>3636</b>								
2.50	2.469	10501	7217	5796								
3.00	3.068	18564	12759	10246								
3.50	3.548	27181	18681	15002								
4.00	4.026	37865	26025	20899								
5.00	5.047	68504	47082	37809								
6.00	6.065	110924	76237	61221								
8.00	7.981	227906	156638	125786								
10.00	10.020	413937	284497	228461								
12.00	11.938	655315	450394	361682	309555	274351	248582	212754	188560	129596	104070	89071

**NO 125-foot then always  
use next highest** ↘

**➤ WHAT YOU NEED TO KNOW**

What Pressure is available **2 Psig**

Gas type, **Natural Gas**

Total BTUs of all units connected to gas piping **3 million**

Length of longest run. **125 feet**


150 feet-3636 million BTU's = **2"** pipe.

# Pipe sizing...



Now you know a 2" is required from the meter to first branch

1. Next find out the size of the pipe on unit after the branch always using the total feet from the meter to that heater and the total of BTUs on branch. Total BTUs of all units connected Branch **2 Million BTUs**
2. Total Length of Branch = **125 feet**

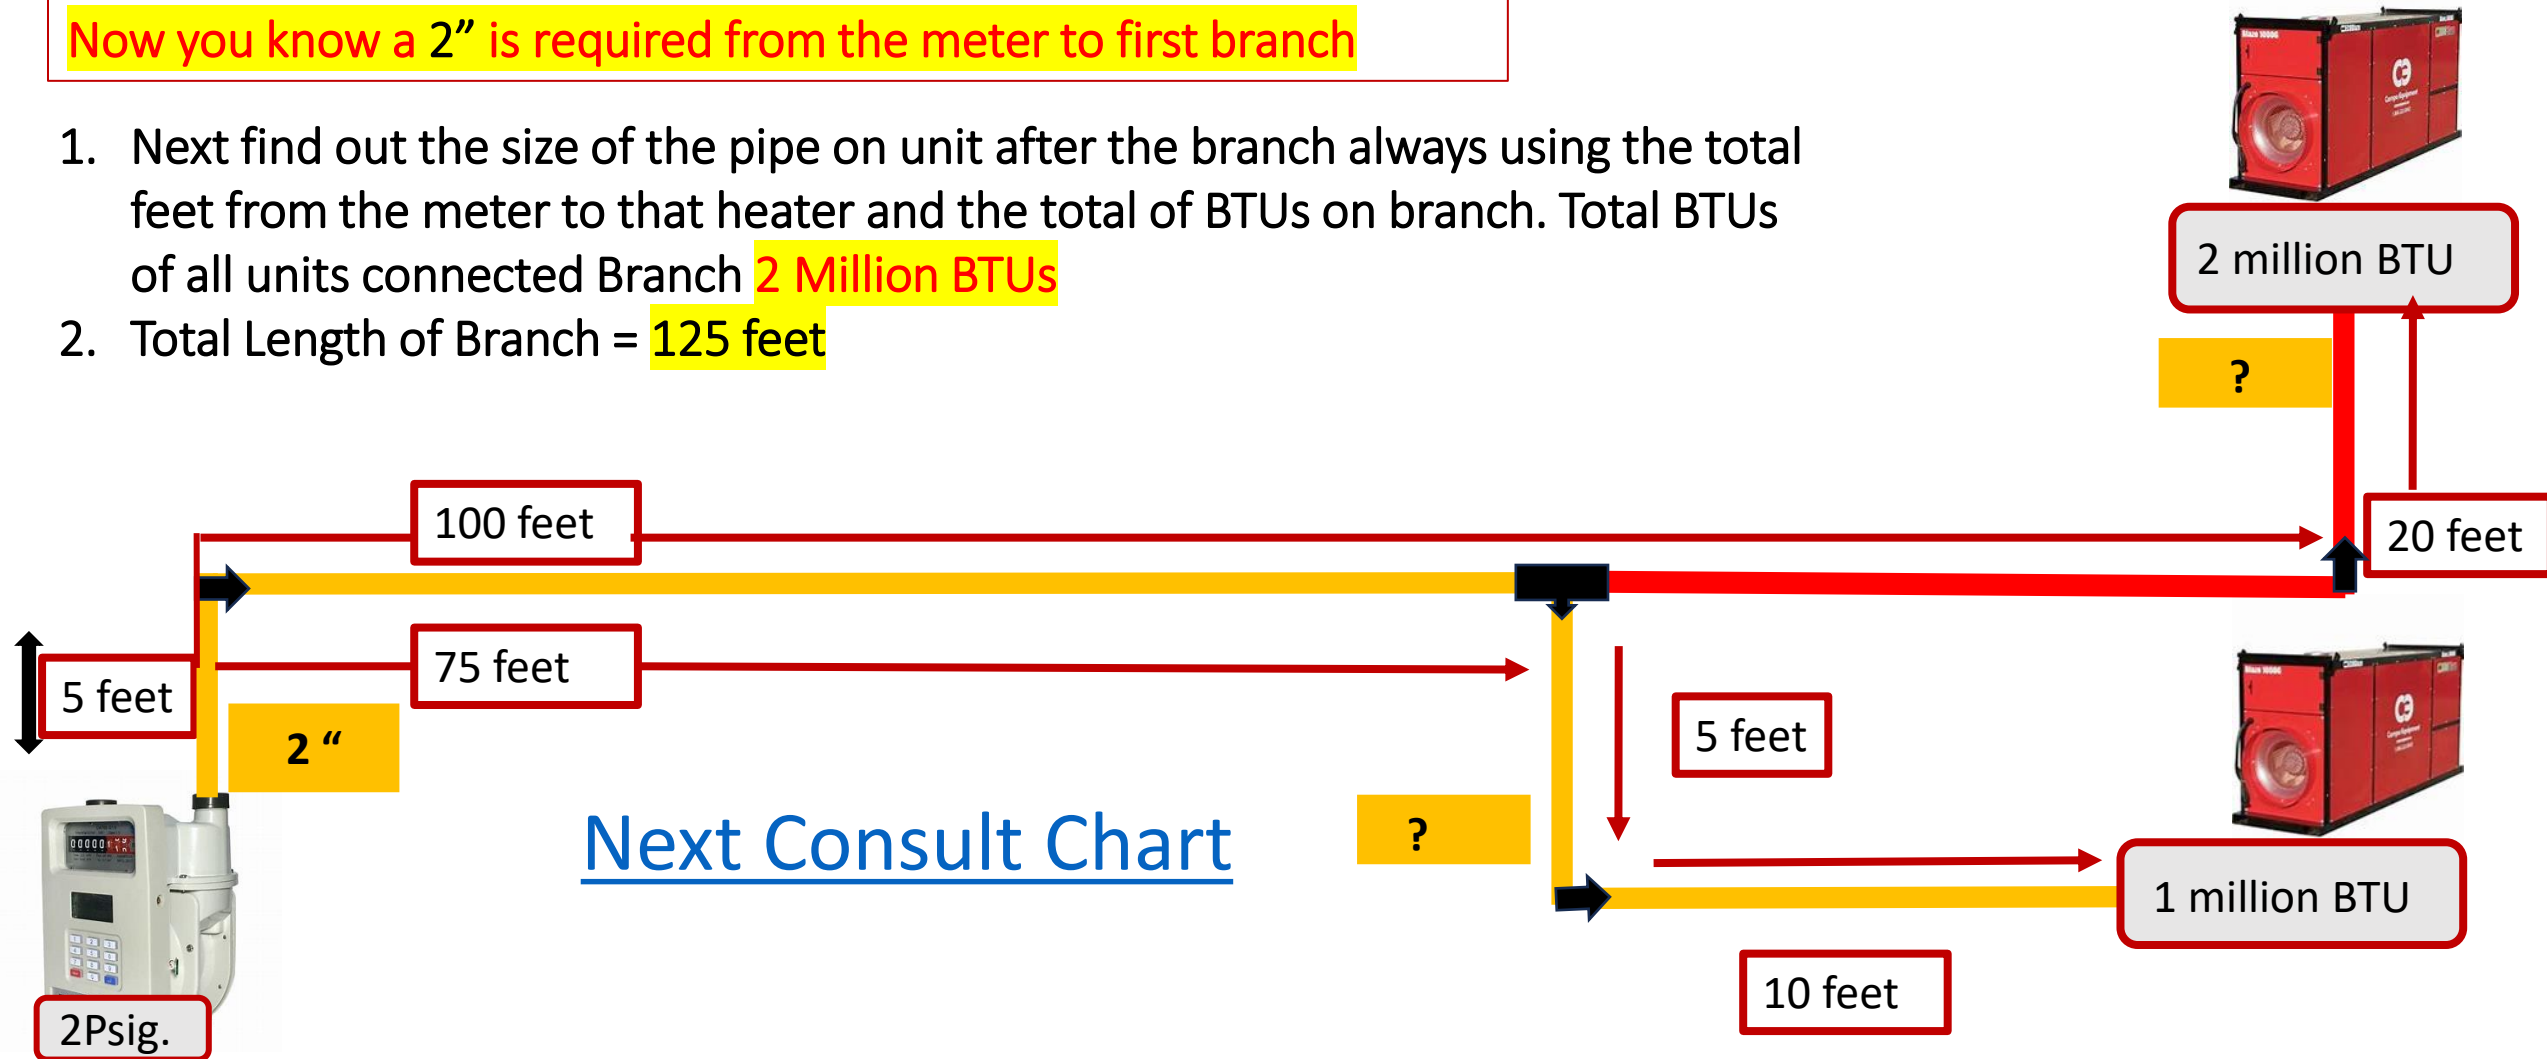

**Pipe sizing Table for 2 pounds Pressure with a 10% Pressure drop and a gas of...  
0.6 Specific Gravity**

**Continue...[Page 54](#)**

Pipe Size of Schedule 40 Standard Pipe (Inches)	Internal Diameter (Inches)	Total Equivalent Length of Pipe in Feet										
		50	100	150	200	250	300	400	500	1000	1500	2000
1.00	1.049	1112	764	614	525	466	422	361	320	220	177	151
1.25	1.380	2283	1569	1260	1079							
1.50	1.610	3421	2351	1888	1616							
<b>2.00</b>	2.067	6589	4528	<b>3636</b>	3112							
2.50	2.469	10501	7217	5796	4961							
3.00	3.068	18564	12759	10246	8769							
3.50	3.548	27181	18681	15002	12840							
4.00	4.026	37865	26025	20899	17887							
5.00	5.047	68504	47082	37809	32359							
6.00	6.065	110924	76237	61221	52397							
8.00	7.981	227906	156638	125786	107657							
10.00	10.020	413937	284497	228461	195533							
12.00	11.938	655315	450394	361682	309553	274351	248582	212754	188560	129596	104070	89071

**Total BTUs on branch = 2000,000**  
**Total length of run = 125 feet**

150 feet-3636 million BTU's = **2"** pipe.


**No 125 foot on chart must use next highest footage.**

# Pipe sizing...



1. Natural Gas chart 2Psig.
2. Total BTUs of all units connected Branch **1 Million BTUs**
3. Total Length of Branch = **95 feet**

Next find out the size of the pipe on the branch using the total feet from the meter to that unit run (**95 feet**) and the total BTUs on that branch

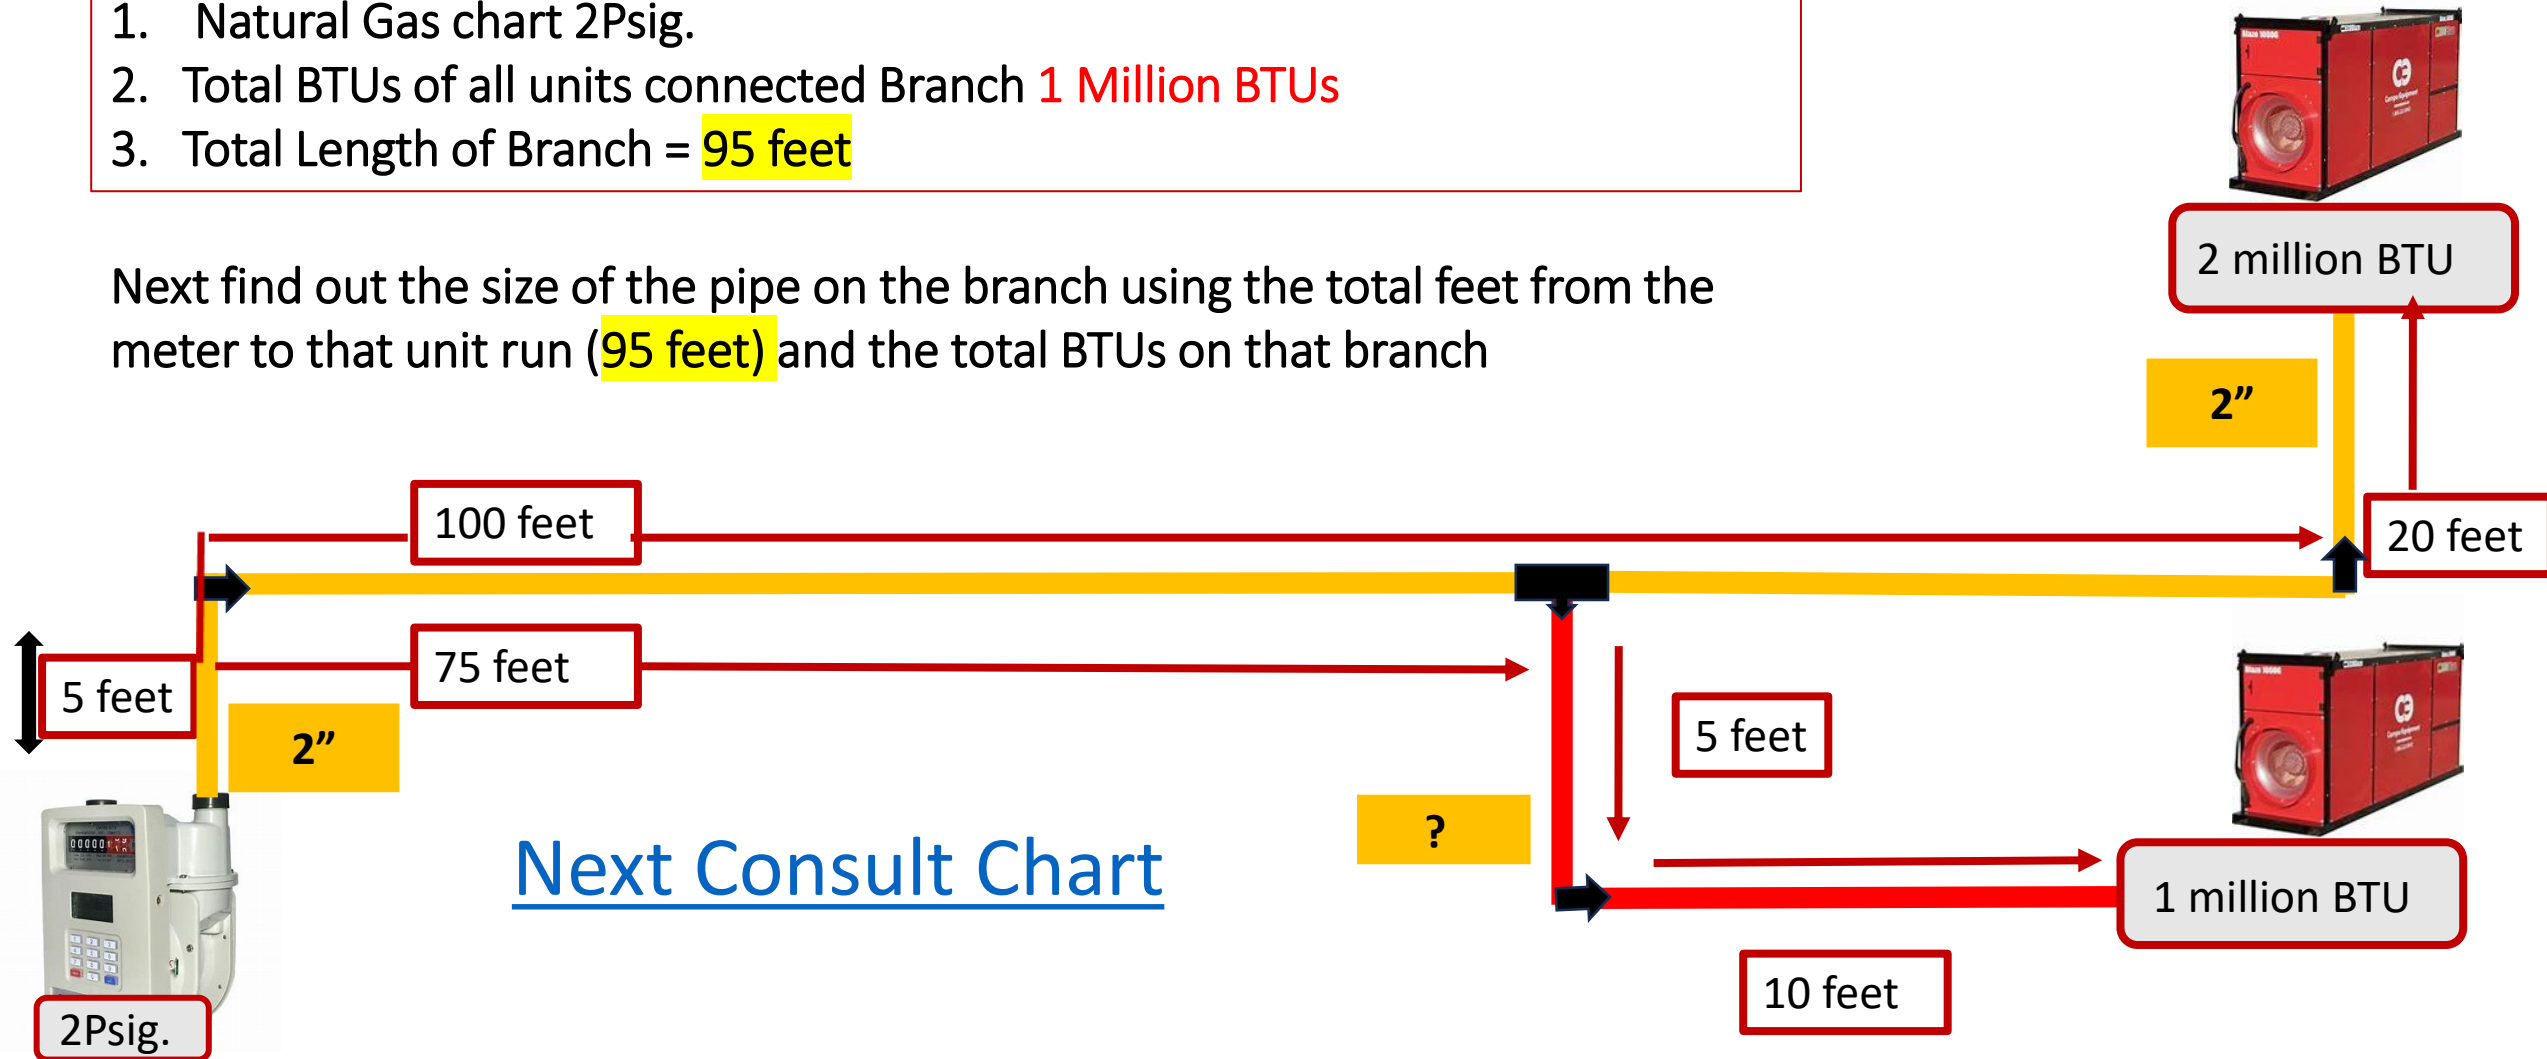

**Pipe sizing Table for 2 pounds Pressure with a 10% Pressure drop and a gas of...  
0.6 Specific Gravity.**


Pipe Size of Schedule 40 Standard Pipe (Inches)	Internal Diameter (Inches)	Total Equivalent Length of Pipe in Feet											
		50	100	150	200	250	300	400	500	1000	1500	2000	
1.00	1.049	1112	764	614	525	466	407	348	289	230	171	112	53
<b>1.25</b>	1.380	2283	<b>1569</b>	1260	1075	900	725	550	375	200	125	50	25
1.50	1.610	3421	2351	1888	1625	1362	1099	836	573	310	147	74	37
2.00	2.067	6589	4528	3636	3125	2614	2103	1592	1081	570	259	118	57
2.50	2.469	10501	7217	5796	4975	4154	3333	2512	1691	970	459	198	97
3.00	3.068	18564	12759	10246	8825	7404	5983	4562	3141	1720	809	348	167
3.50	3.548	27181	18681	15002	13000	10998	8996	6994	4992	2990	1488	646	304
4.00	4.026	37865	26025	20899	18250	15600	12950	10300	7650	5000	2350	900	450
5.00	5.047	68504	47082	37809	32539	28680	25986	22240	19711	13547	10879	9311	7743
6.00	6.065	110924	76237	61221	52397	46439	42077	36012	31917	21936	17616	15077	12538
8.00	7.981	227906	156638	125786	107657	95414	86452	73992	65578	45071	36194	30977	25760
			14497	228461	195533	173297	157020	134389	119106	81861	65737	56263	46789
			10394	361682	309553	274351	248582	212754	188560	129596	104070	89071	74071

**NO 95-foot then always  
use next highest**


1. Natural Gas chart 2Psig.
  2. Total BTUs of all units connected Branch **1 Million BTUs**
  3. Total Length of Branch from meter = **95 feet**
- 100 feet-1569 BTU's = **1 ¼"**

[Continue... Page 56](#)

# Pipe sizing...

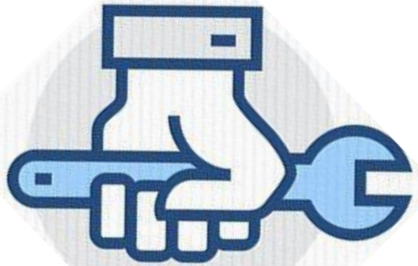

**Piping for job complete**

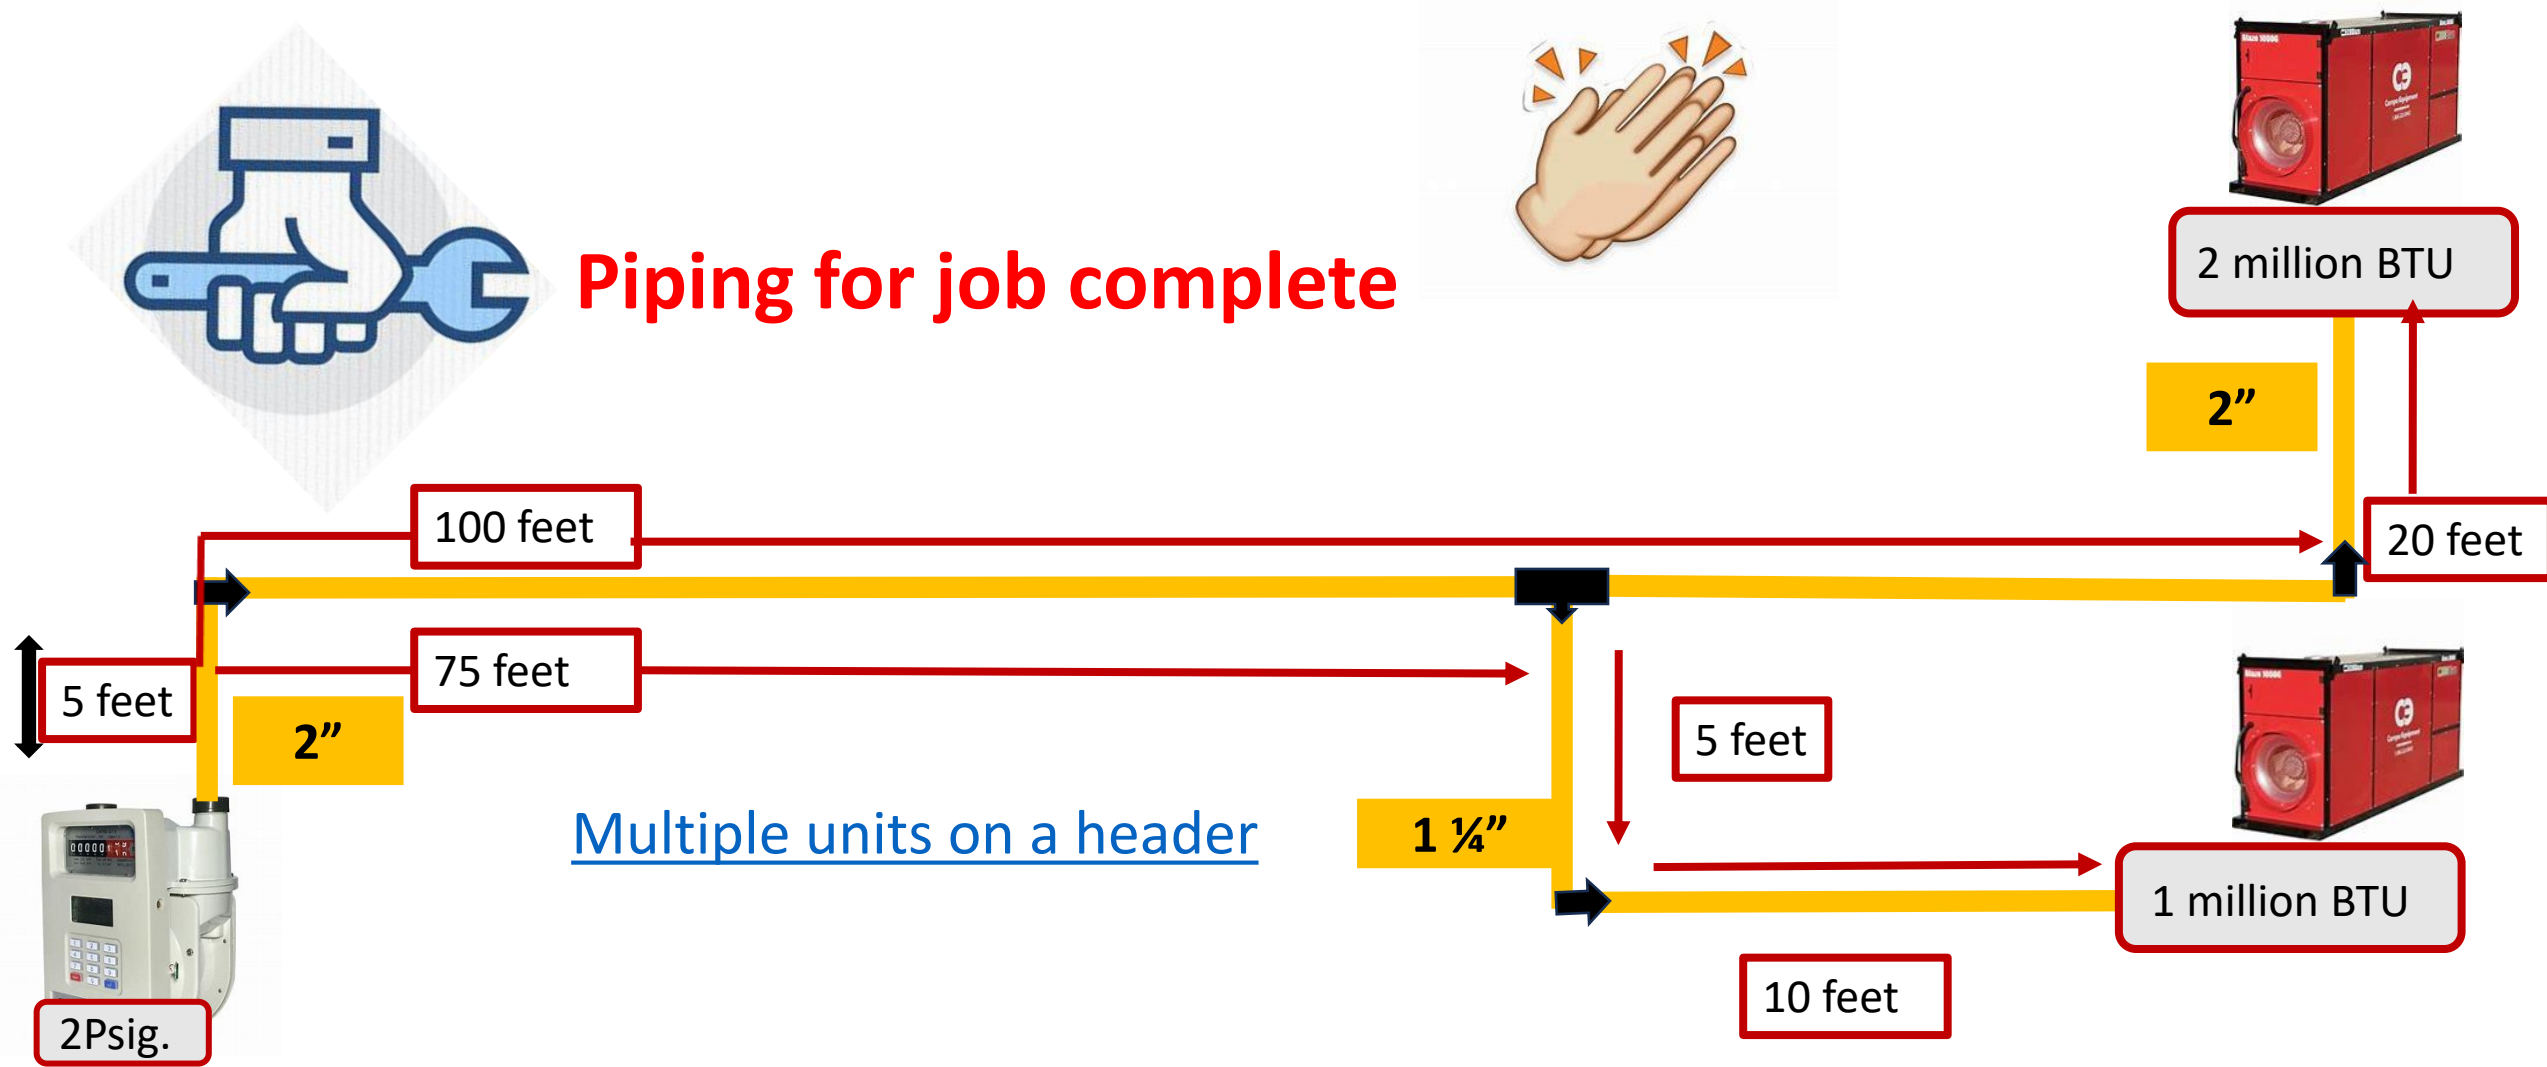


Multiple units on a header

# Pipe sizing multiple heaters one header...



**Note:** any other appliances operating off the same meter would have to be calculated in to piping.

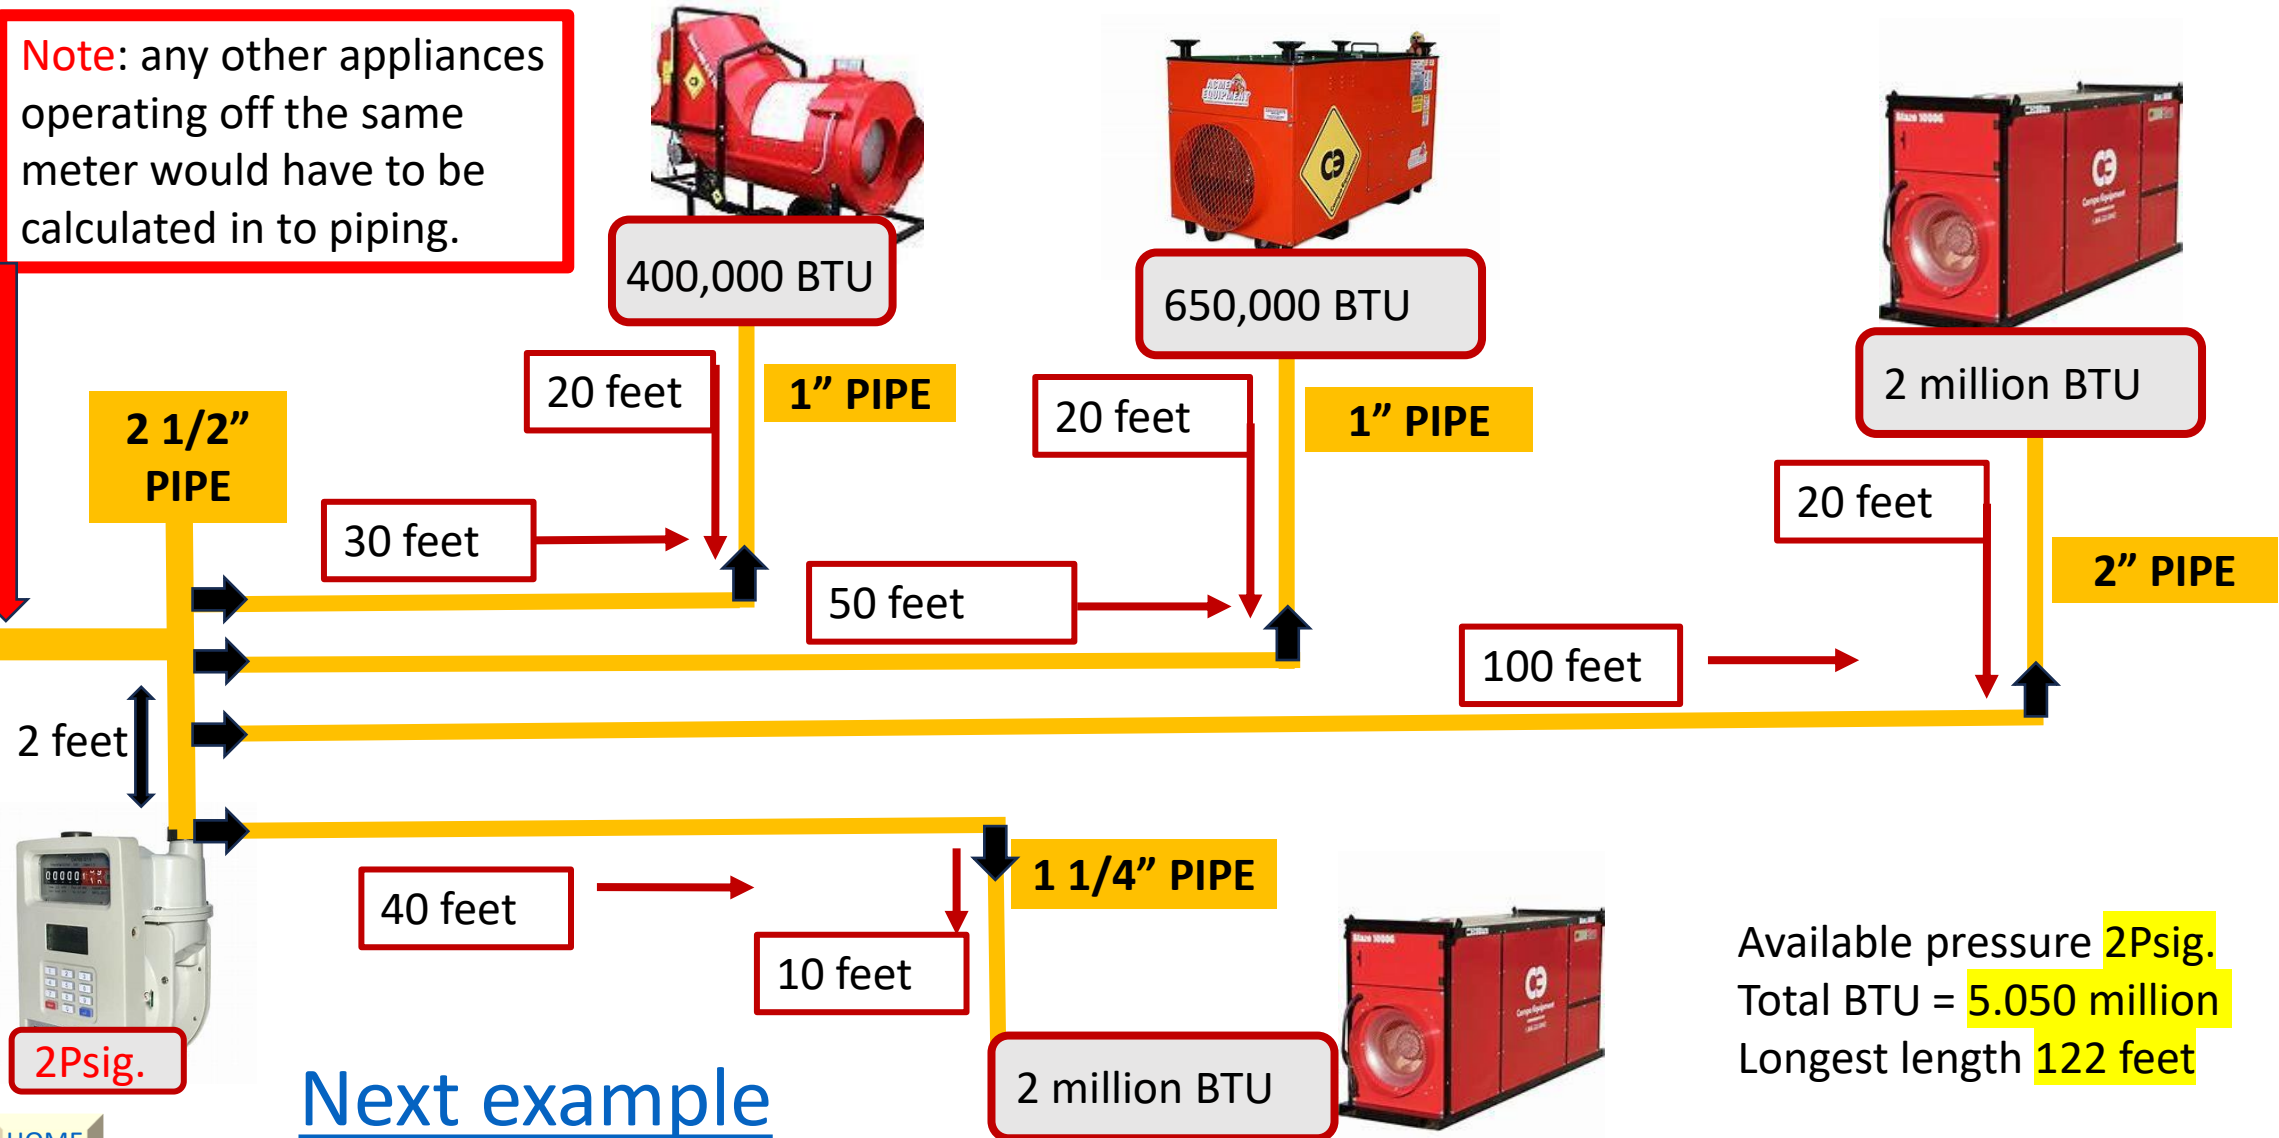

Available pressure 2Psig.  
 Total BTU = 5.050 million  
 Longest length 122 feet

Next example

# Pipe sizing multiple heaters one Main Line and multiple drops...

"Field Assist Troubleshooting Guide"




Available pressure 2Psig.

Total BTU = 4250,000

Longest length 165 feet

**Note:** any other appliances operating off the same meter would have to be calculated in to piping.

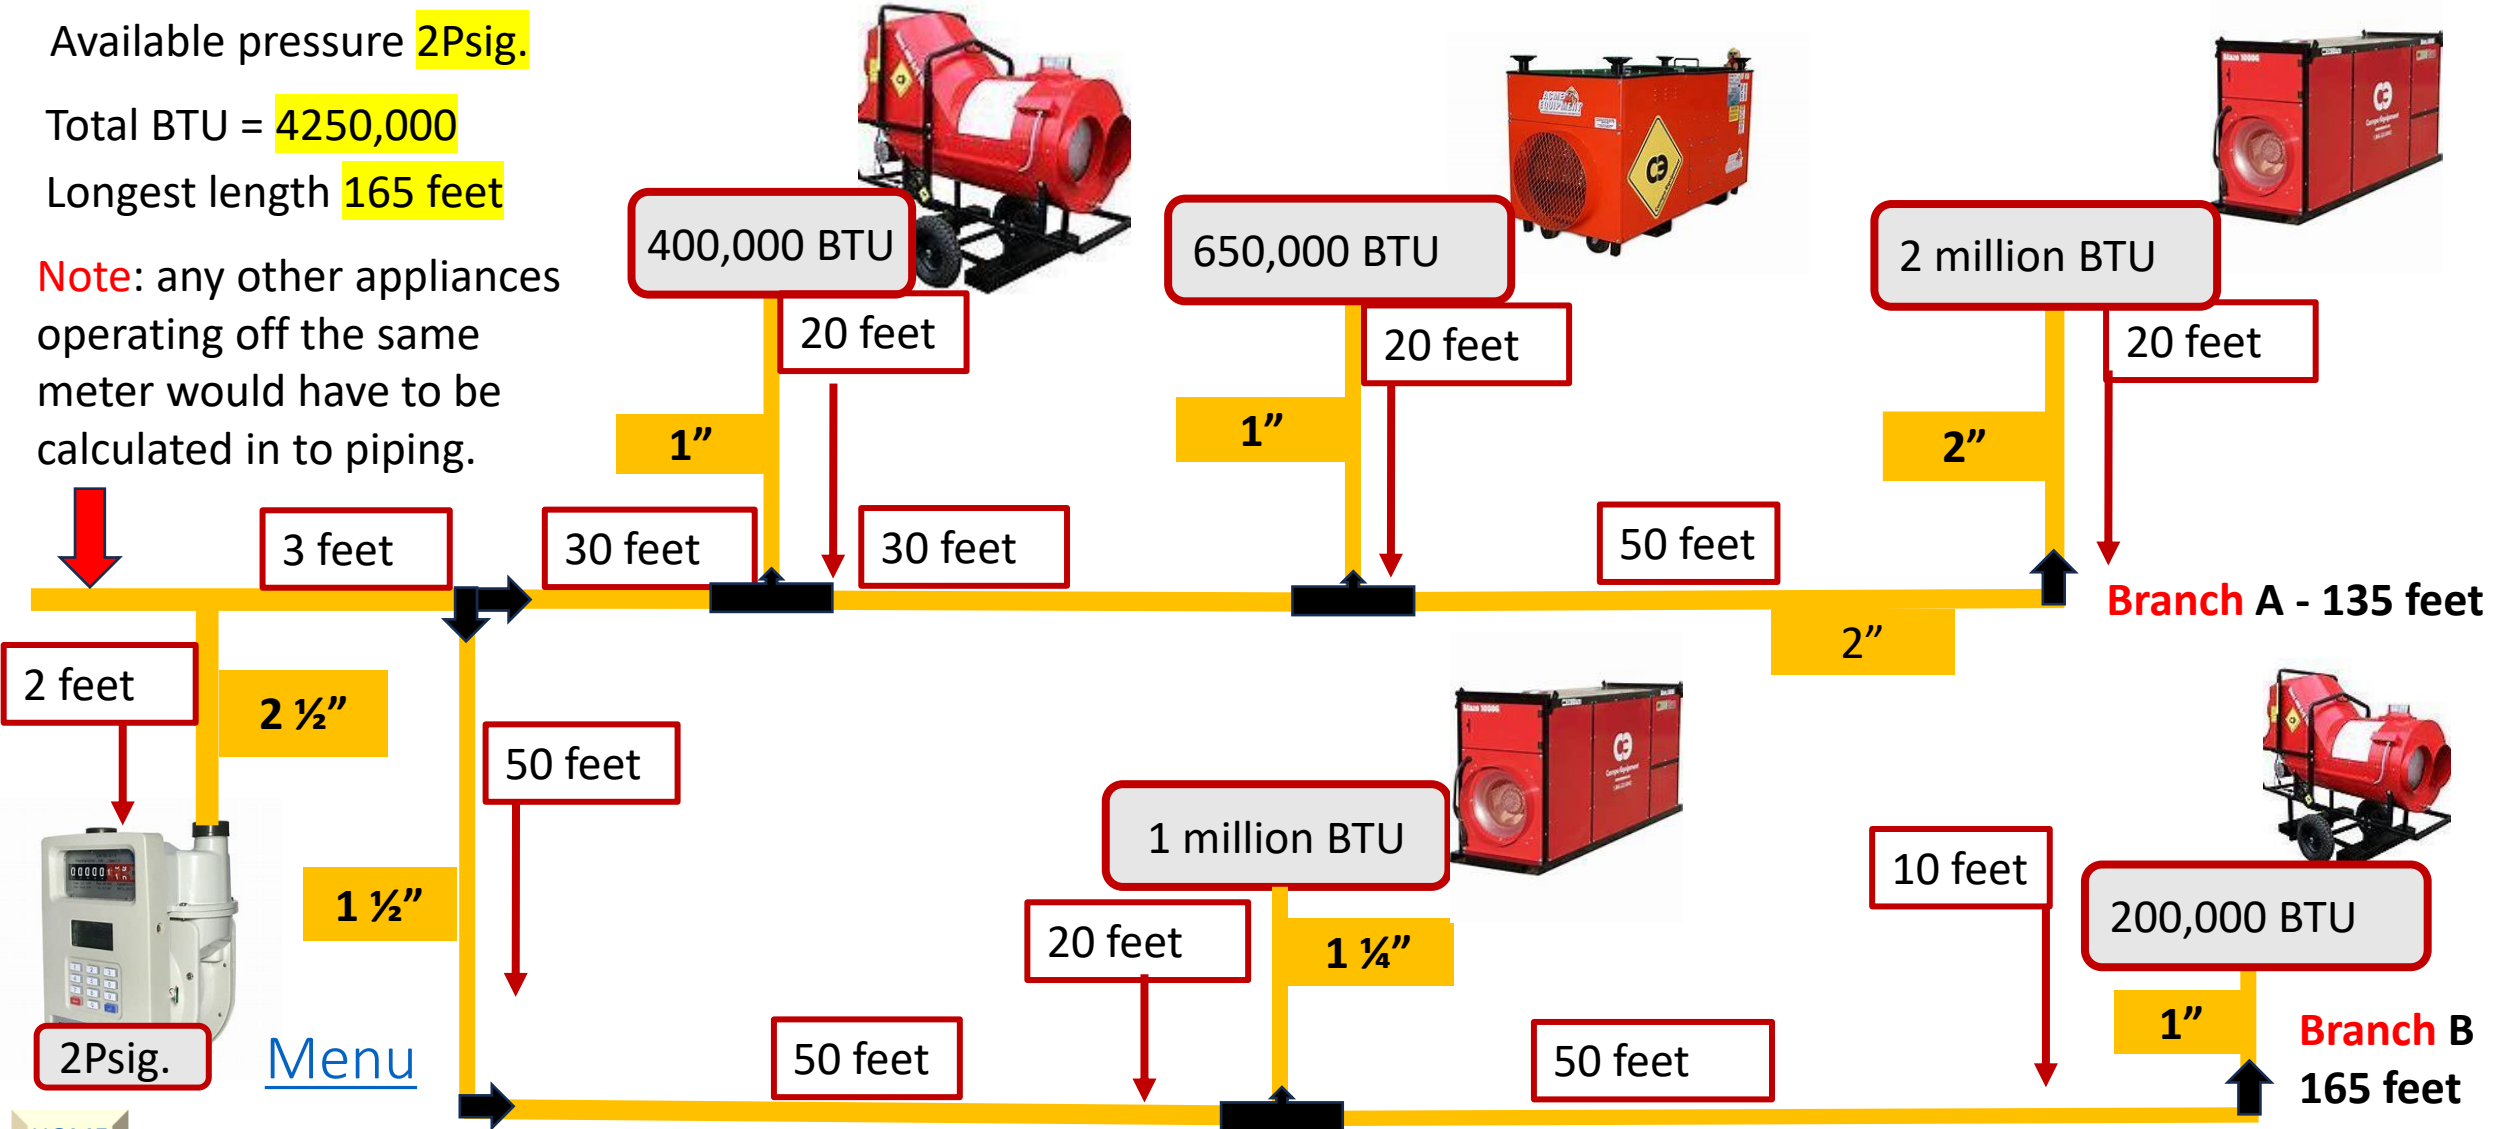

# Piping charts gas 0.6 specific gravity... “Field Assist Troubleshooting Guide”



1

.05 PSIG. Or  
less... [Page 60](#)



2

1 PSIG. With less  
than 10 % pressure  
drop... [Page 61](#)



3

2 PSIG. With less  
than 10 %  
pressure drop...  
[Page 62](#)



4

5 PSIG. With less  
than 10 %  
pressure drop...  
[Page 63](#)

➤ **Note:** All gas piping should be calculated and installed by a qualified Gas fitter.

Gas fitters have charts for sizing gas pipes and proper regulators for different pressures and installations.

[HOME](#)

➤ Back to menu... [Page 33](#)

**Maximum Capacity of Pipe in Cubic Feet of Gas per  
Hour for Gas Pressures of 0.5 Psig or Less and a  
Pressure Drop of 0.3 Inch Water Column  
(Based on a 0.60 Specific Gravity Gas)**

Nominal Iron Pipe Size, Inches	Internal Diameter, Inches	Length of Pipe, Feet													
		10	20	30	40	50	60	70	80	90	100	125	150	175	200
¼	.364	32	22	18	15	14	12	11	11	10	9	8	8	7	6
⅜	.493	72	49	40	34	30	27	25	23	22	21	18	17	15	14
½	.622	132	92	73	63	56	50	46	43	40	38	34	31	28	26
¾	.824	278	190	152	130	115	105	96	90	84	79	72	64	59	55
1	1.049	520	350	285	245	215	195	180	170	160	150	130	120	110	100
1¼	1.380	1,050	730	590	500	440	400	370	350	320	305	275	250	225	210
1½	1.610	1,600	1,100	890	760	670	610	560	530	490	460	410	380	350	320
2	2.067	3,050	2,100	1,650	1,450	1,270	1,150	1,050	990	930	870	780	710	650	610
2½	2.469	4,800	3,300	2,700	2,300	2,000	1,850	1,700	1,600	1,500	1,400	1,250	1,130	1,050	980

[HOME](#)

[Return to Chart Menu...](#) [Page 59](#)

**Pipe Sizing Table for 1 Pound Pressure**  
**Capacity of Pipes of Different Diameters and Lengths in**  
**Cubic Feet per Hour for an Initial Pressure of 1.0 Psig With a**  
**10 Percent Pressure Drop and a Gas of 0.6 Specific Gravity**

Pipe Size of Schedule 40 Standard Pipe (Inches)	Internal Diameter (Inches)	Total Equivalent Length of Pipe in Feet										
		50	100	150	200	250	300	400	500	1000	1500	2000
1.00	1.049	717	493	396	338	300	272	233	206	142	114	97
1.25	1.380	1471	1011	812	695	616	558	478	423	291	234	200
1.50	1.610	2204	1515	1217	1041	923	836	716	634	436	350	300
2.00	2.067	4245	2918	2343	2005	1777	1610	1378	1222	840	674	577
2.50	2.469	6766	4651	3735	3196	2833	2567	2197	1947	1338	1075	920
3.00	3.068	11962	8221	6602	5650	5008	4538	3884	3442	2366	1900	1626
3.50	3.548	17514	12037	9666	8273	7332	6644	5686	5039	3464	2781	2381
4.00	4.026	24398	16769	13466	11525	10214	9255	7921	7020	4825	3875	3316
5.00	5.047	44140	30337	24362	20851	18479	16744	14330	12701	8729	7010	6000
6.00	6.065	71473	49123	39447	33762	29923	27112	23204	20566	14135	11351	9715
8.00	7.981	146849	100929	81049	69368	61479	55705	47676	42254	29041	23321	19960

[HOME](#)

[Return to Chart Menu...](#) [Page 59](#)

**Pipe Sizing Table for 2 Pounds Pressure**  
**Capacity of Pipes of Different Diameters and Lengths in**  
**Cubic Feet per Hour for an Initial Pressure of 2.0 Psig With a**  
**10 Percent Pressure Drop and a Gas of 0.6 Specific Gravity**

62

Pipe Size of Schedule 40 Standard Pipe (Inches)	Internal Diameter (Inches)	Total Equivalent Length of Pipe in Feet										
		50	100	150	200	250	300	400	500	1000	1500	2000
1.00	1.049	1112	764	614	525	466	422	361	320	220	177	151
1.25	1.380	2283	1569	1260	1079	956	866	741	657	452	363	310
1.50	1.610	3421	2351	1888	1616	1432	1298	1111	984	677	543	465
2.00	2.067	6589	4528	3636	3112	2758	2499	2139	1896	1303	1046	896
2.50	2.469	10501	7217	5796	4961	4396	3983	3409	3022	2077	1668	1427
3.00	3.068	18564	12759	10246	8769	7772	7042	6027	5342	3671	2948	2523
3.50	3.548	27181	18681	15002	12840	11379	10311	8825	7821	5375	4317	3694
4.00	4.026	37865	26025	20899	17887	15853	14364	12293	10895	7488	6013	5147
5.00	5.047	68504	47082	37809	32359	28680	25986	22240	19711	13547	10879	9311
6.00	6.065	110924	76237	61221	52397	46439	42077	36012	31917	21936	17616	15077
8.00	7.981	227906	156638	125786	107657	95414	86452	73992	65578	45071	36194	30977

**Pipe Sizing Table for 5 Pounds Pressure**  
**Capacity of Pipes of Different Diameters and Lengths in**  
**Cubic Feet per Hour for an Initial Pressure of 5.0 Psig With a**  
**10 Percent Pressure Drop and a Gas of 0.6 Specific Gravity**

63

Pipe Size of Schedule 40 Standard Pipe (Inches)	Internal Diameter (Inches)	Total Equivalent Length of Pipe in Feet										
		50	100	150	200	250	300	400	500	1000	1500	2000
1.00	1.049	1989	1367	1098	940	833	755	646	572	393	316	270
1.25	1.380	4084	2807	2254	1929	1710	1549	1326	1175	808	649	555
1.50	1.610	6120	4206	3378	2891	2562	2321	1987	1761	1210	972	832
2.00	2.067	11786	8104	6505	5567	4934	4471	3827	3391	2331	1872	1602
2.50	2.469	18785	12914	10368	8874	7865	7126	6099	5405	3715	2983	2553
3.00	3.068	33209	22824	18329	15687	13903	12597	10782	9556	6568	5274	4514
3.50	3.548	48623	33418	26836	22968	20356	18444	15786	13991	9616	7722	6609
4.00	4.026	67736	46555	37385	31997	28358	25694	21991	19490	13396	10757	9207
5.00	5.047	122544	84224	67635	57887	51304	46485	39785	35261	24235	19461	16656
6.00	6.065	198427	136378	109516	93732	83073	75270	64421	57095	39241	31512	26970
8.00	7.981	407692	280204	225014	192583	170683	154651	132361	117309	80626	64745	55414

[HOME](#)

[Return to Chart Menu...](#) [Page 59](#)



The **EB400G** can be used in most applications with ductwork.

The maximum outlet (supply air) is **400** feet. The **maximum** inlet (return air) is **50** feet.

Total ducting, Outlet plus Inlet **not to exceed 400** feet.

### ➤ Best practices...

- ✓ Never exceed the **400** feet of total ducting and **50** feet of air inlet ducting.
- ✓ If flexible ducting is used, there should be no kinks in ductwork.
- ✓ Weather flexible or solid ducting is used, try to avoid sharp 90° turns.
- ✓ If ducting is split into 2 locations, use a TY not a T. and a maximum of 200 feet total ducting.
- ✓ If ducting is split into 2 locations, ensure the volume of air passing through is equal to or greater than the single outlet of the heater.
- ✓ Ensure all ducting is properly protected from water, traffic, and other obstructions.
- **Note:** Improper ducting will cause overheating and short cycling which will damage the heater.

➤ **Return** to start up and technical information menu... [Page 33](#)